Fuel Tank Filler Door Lock Actuator Replacement

Removal Procedure

1. Remove the rear compartment side trim (right) panel. Refer to Rear Compartment Side Trim Panel Replacement .

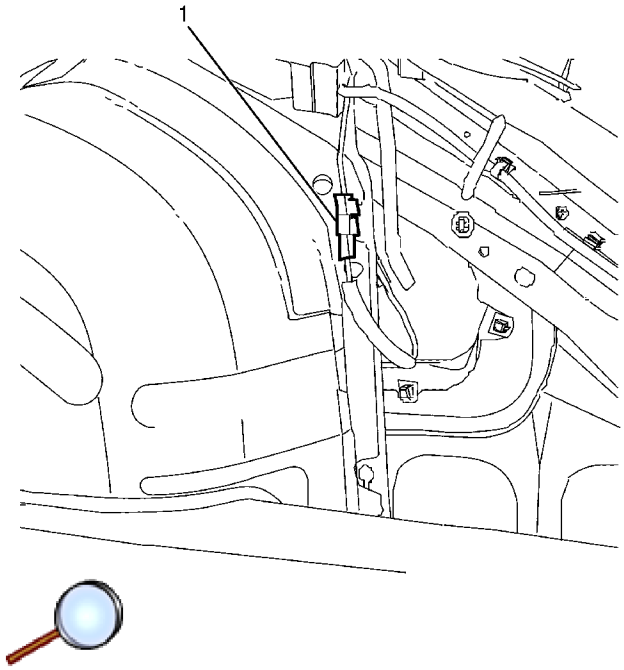

2. Disconnect the electrical connector (1) to the fuel filler door release actuator.

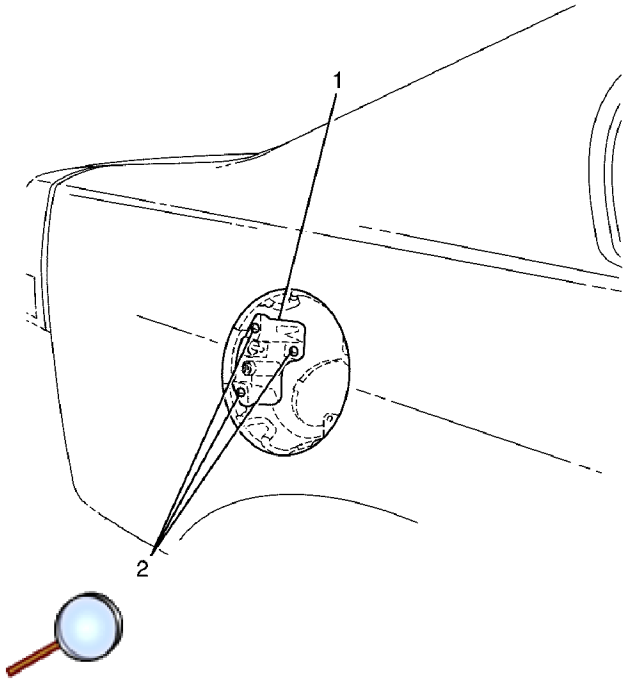

3. Remove the fuel filler door release actuator to fuel filler neck retaining screws (2).
4. Remove the fuel filler door release actuator (1) from the upper fuel filler neck.

© 2010 General Motors Corporation. All rights reserved.

Installation Procedure

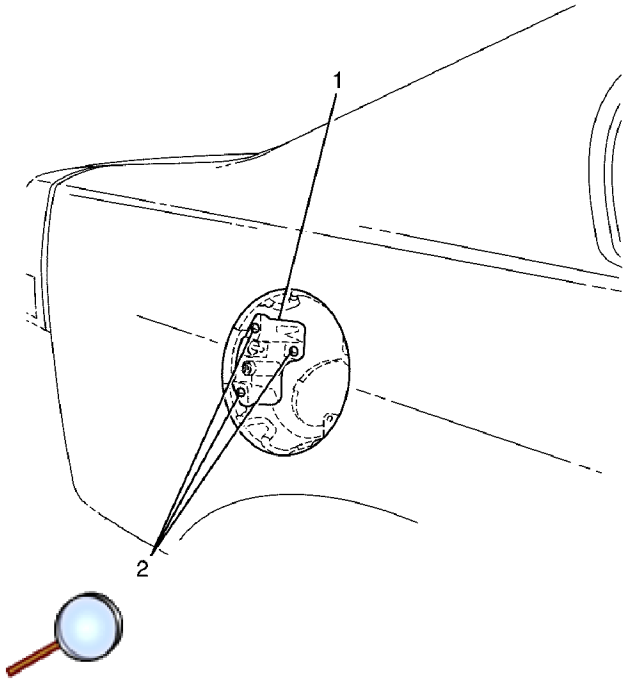

1. Install the fuel filler door release actuator (1) to the upper fuel filler neck.

   Notice: Refer to Fastener Notice in the Preface section.

2. Install the fuel filler door release actuator to upper fuel filler neck retaining screws (2).

   Tighten
   Tighten the screws to 2 N·m (18 lb in).

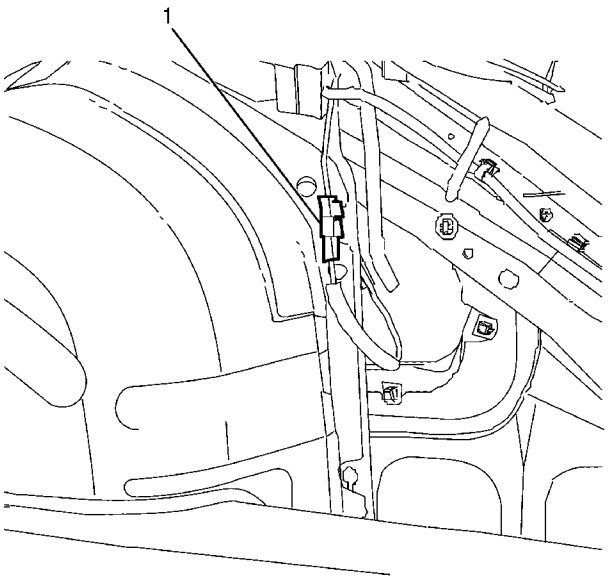

3. Connect the electrical connector (1) to the fuel filler door release actuator.
4. Install the rear compartment side trim (right) panel. Refer to Rear Compartment Side Trim Panel Replacement .

Front Side Door Inside Handle Cable Replacement

Removal Procedure - Door Handle Cable

1. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement .
2. Remove the water deflector. Refer to Front Side Door Water Deflector Replacement .
3. Remove the door latch. Refer to Front Side Door Latch Replacement .

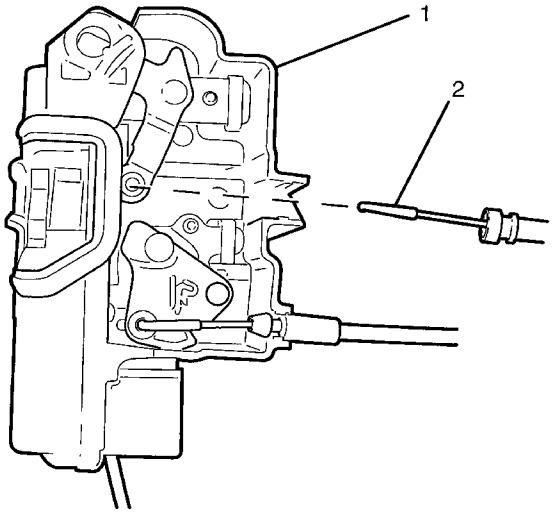

4. Disconnect the door handle cable (2) from the door latch (1).

Installation Procedure - Door Handle Cable

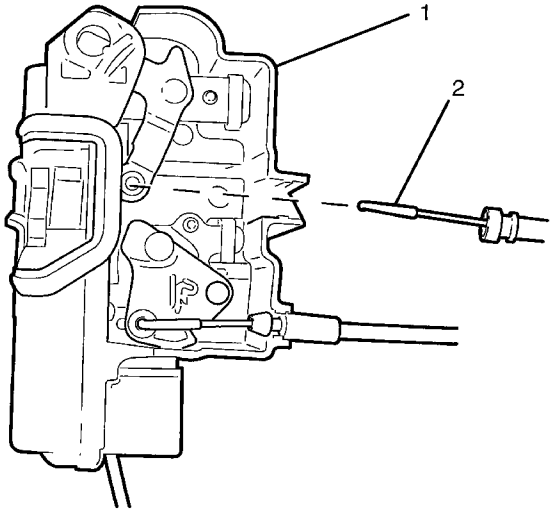

© 2010 General Motors Corporation. All rights reserved.

1. Connect the door handle cable (2) to the door latch (1).
2. Install the door latch. Refer to Front Side Door Latch Replacement .
3. Install the water deflector. Refer to Front Side Door Water Deflector Replacement .
4. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement .

Removal Procedure - Lock Cable

1. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement .
2. Remove the water deflector. Refer to Front Side Door Water Deflector Replacement .
3. Remove the door latch. Refer to Front Side Door Latch Replacement .

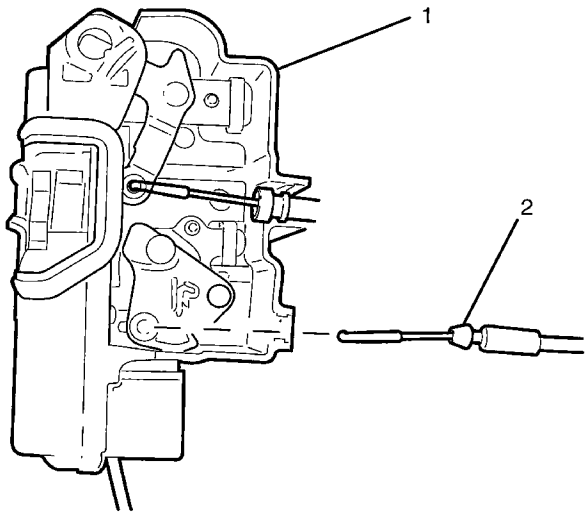

4. Disconnect the door lock cable (2) from the door latch (1).

Installation Procedure - Lock Cable

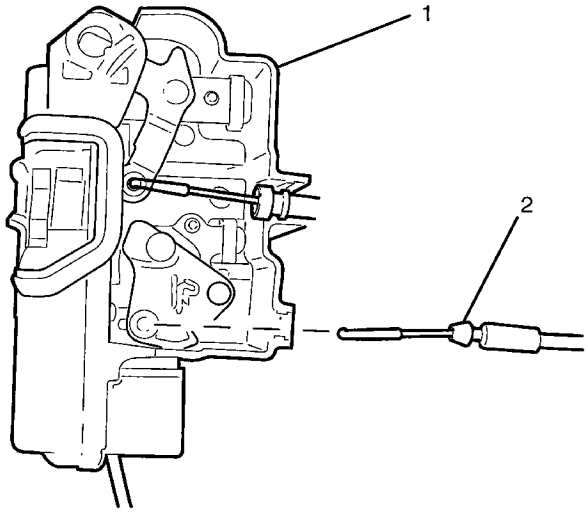

1. Connect the lock handle cable (2) to the door latch (1).
2. Install the door latch. Refer to Front Side Door Latch Replacement .
3. Install the water deflector. Refer to Front Side Door Water Deflector Replacement .
4. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement .

Rear Compartment Lid Latch Release Cable Replacement

Removal Procedure

Important: When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.

1. Support the rear compartment lid with a suitable brace.
2. Remove the rear seat back. Refer to Rear Seat Back Replacement.
3. Remove the rear compartment side trim panel replacement. Refer to Rear Compartment Side Trim Panel Replacement.
4. Remove the rear compartment lid lock actuator. Refer to Rear Compartment Lid Latch Replacement.

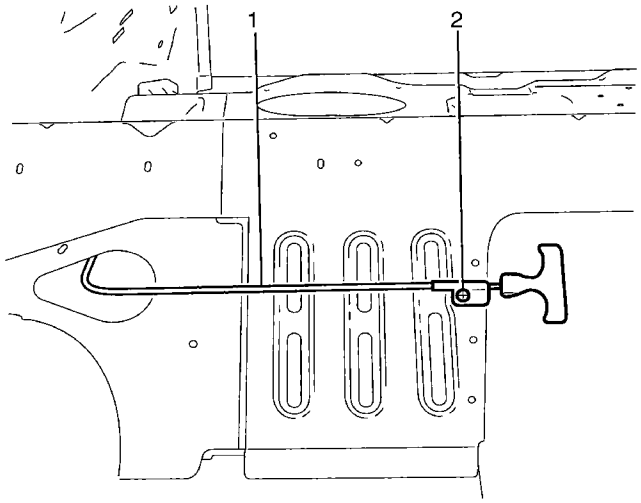

5. Remove the rear compartment lid release cable to rear seat back panel retaining screw (1)

© 2010 General Motors Corporation. All rights reserved.

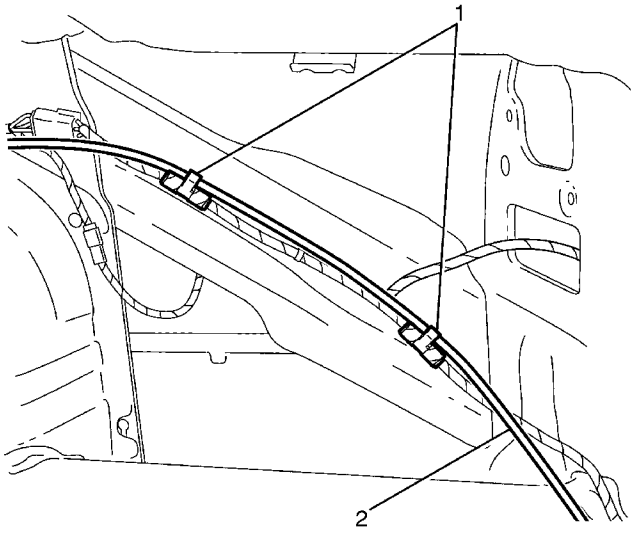

6. Remove the rear compartment lid release cable to rear compartment retaining clips (1).
7. Remove the rear compartment lid release cable (2) from the rear compartment.

Installation Procedure

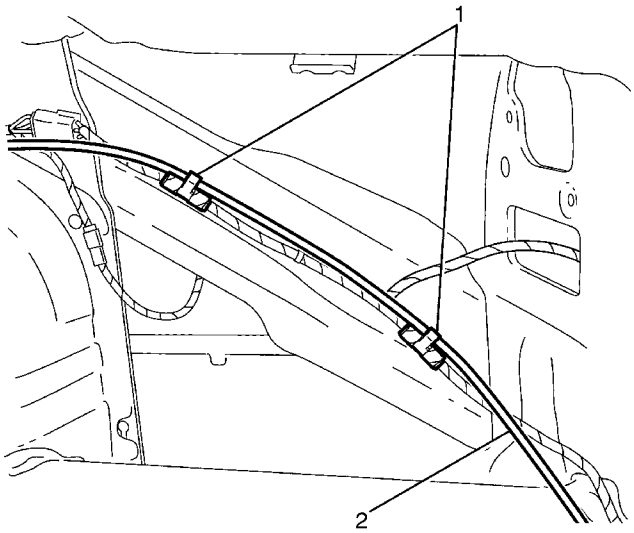

1. Position the rear compartment lid release cable (2) in the rear compartment.
2. Install the rear compartment lid release cable to rear compartment retaining clips (2).

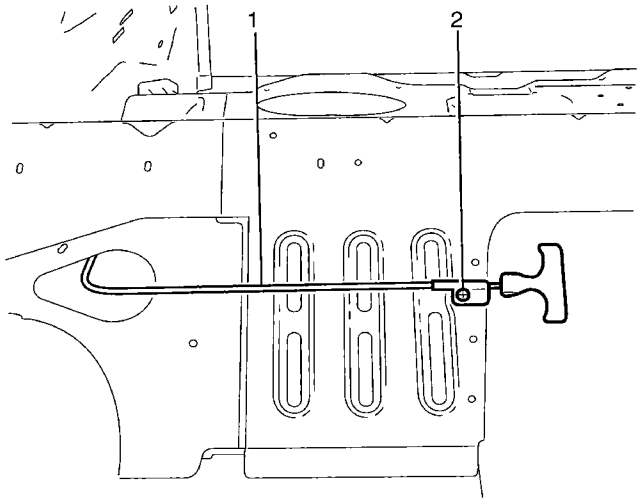

3. Install the rear compartment lid release cable to rear seat back panel retaining screw (1).

   Tighten
   Tighten the screw to 2 N·m (18 lb in).

4. Install the rear compartment lid lock actuator. Refer to Rear Compartment Lid Latch Replacement.
5. If re-programming is required. Refer to Control Module References.
6. Install the rear compartment side trim panel replacement. Refer to Rear Compartment Side Trim Panel Replacement.
7. Install the rear seat back. Refer to Rear Seat Back Replacement.
8. Remove the suitable brace from the vehicle.

Rear Side Door Inside Handle Cable Replacement

Removal Procedure - Door Handle Cable

1. Remove the door trim panel. Refer to Rear Side Door Trim Panel Replacement .
2. Remove the water deflector. Refer to Rear Side Door Water Deflector Replacement .
3. Remove the door latch. Refer to Rear Side Door Latch Replacement .

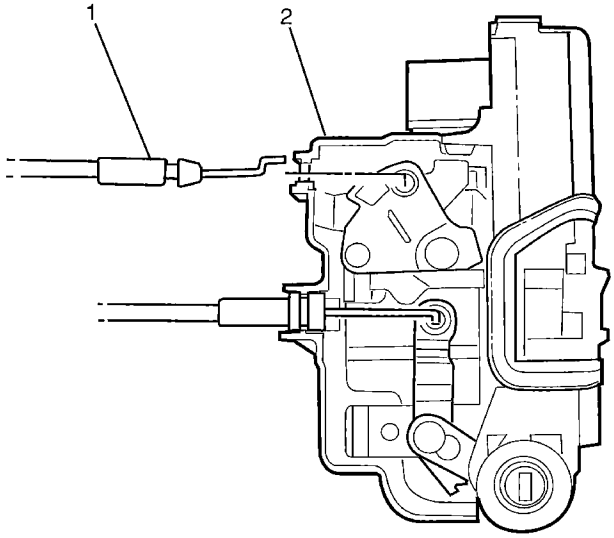

4. Disconnect the door handle cable (1) from the door latch (2).

Installation Procedure - Door Handle Cable

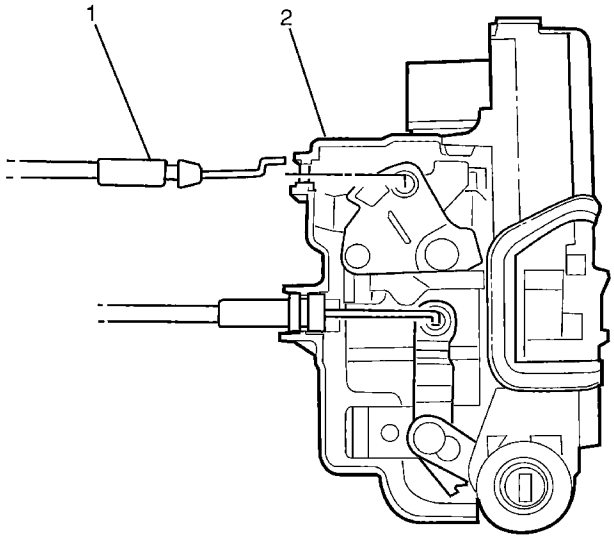

© 2010 General Motors Corporation. All rights reserved.

1. Connect the door handle cable (1) to the door latch (2).
2. Install the door latch. Refer to Rear Side Door Latch Replacement .
3. Install the water deflector. Refer to Rear Side Door Water Deflector Replacement .
4. Install the door trim panel. Refer to Rear Side Door Trim Panel Replacement .

Removal Procedure - Lock Cable

1. Remove the door trim panel. Refer to Rear Side Door Trim Panel Replacement .
2. Remove the water deflector. Refer to Rear Side Door Water Deflector Replacement .
3. Remove the door latch. Refer to Rear Side Door Latch Replacement .

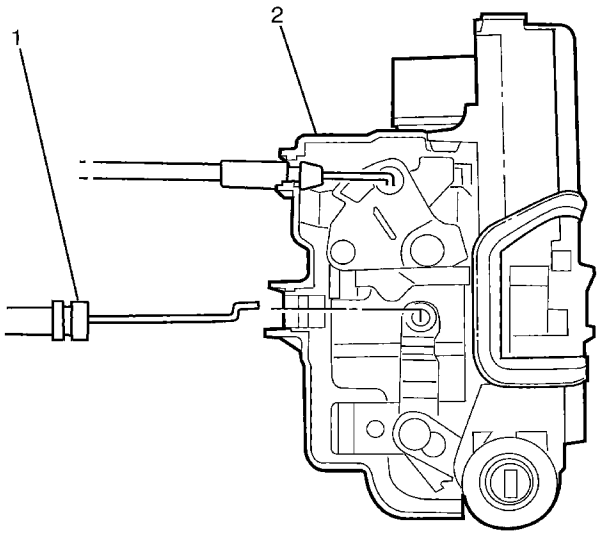

4. Disconnect the lock cable (1) from the door latch (2).

Installation Procedure - Lock Cable

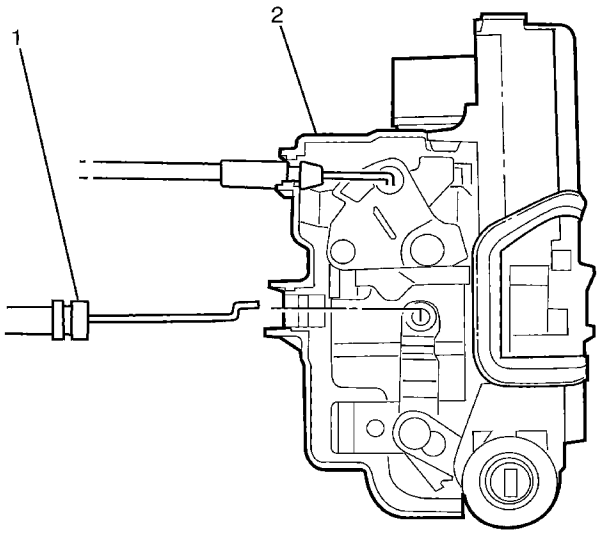

1. Connect the door handle cable (1) to the door latch (2).
2. Install the door latch. Refer to Rear Side Door Latch Replacement .
3. Install the water deflector. Refer to Rear Side Door Water Deflector Replacement .
4. Install the door trim panel. Refer to Rear Side Door Trim Panel Replacement .

Door Lock Cylinder Replacement

Removal Procedure

Important: Do not attempt repairs in order to correct lock cylinder discrepancies. Replace the lock cylinder.

1. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement.
2. Pull the rear half of the water deflector away from the drivers door panel in order to access the door lock cylinder.

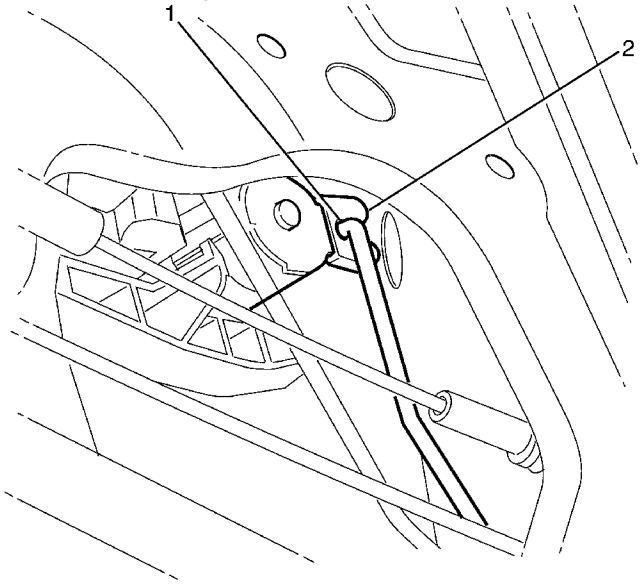

3. Remove the lock actuating rod (1) from the lock cylinder (2).

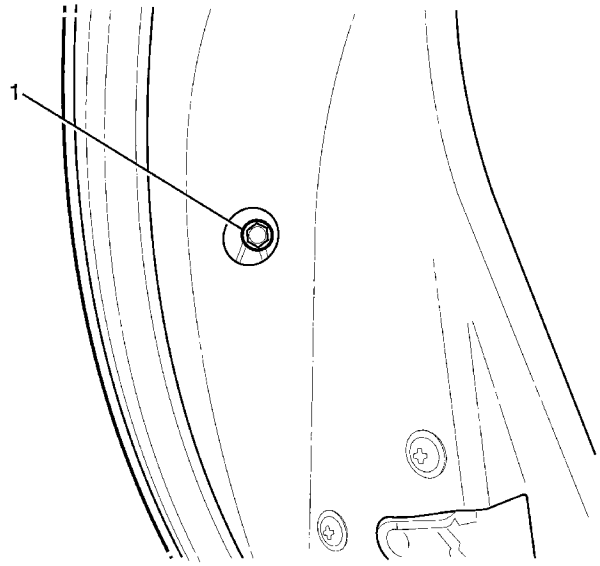

© 2010 General Motors Corporation. All rights reserved.

Important: Remove the rubber blanking grommet to expose lock cylinder retaining bolt (1).

4. Remove the lock cylinder to outside door handle retaining bolt (1).

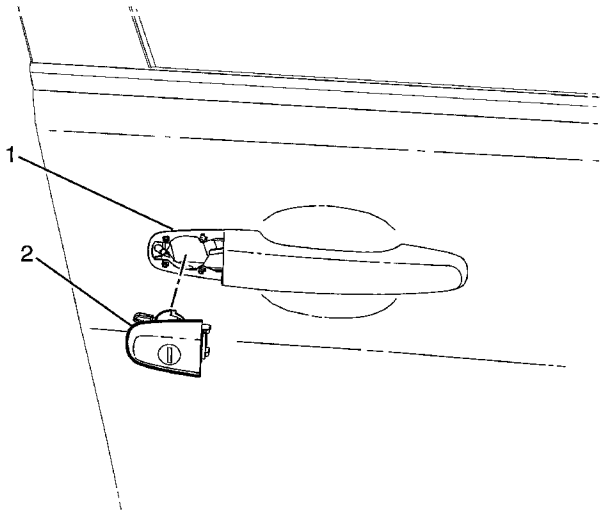

5. Remove the lock cylinder (2) from the outside door handle (1).

Installation Procedure

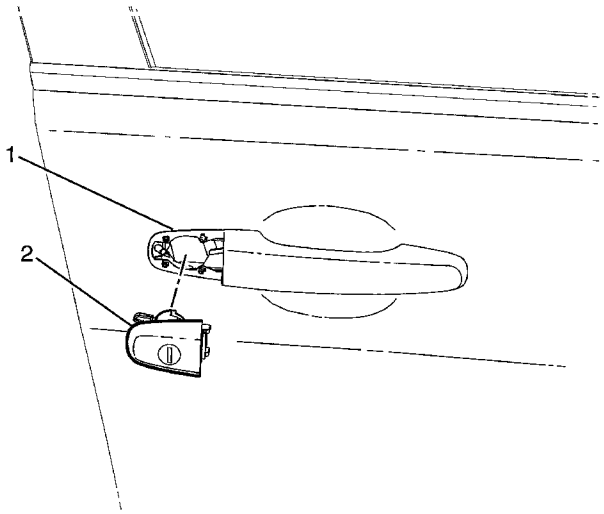

1. Position the lock cylinder (2) to the outside door handle (1).

Notice: Refer to Fastener Notice in the Preface section.

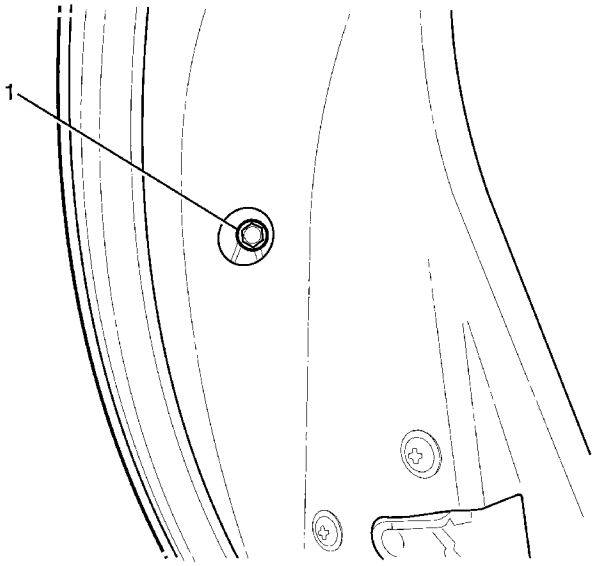

2. Install the lock cylinder to outside door handle retaining bolt (1).

Tighten
Tighten the bolt to 4 N-m (35 lb in).

3. Install the rubber blanking grommet to the door.

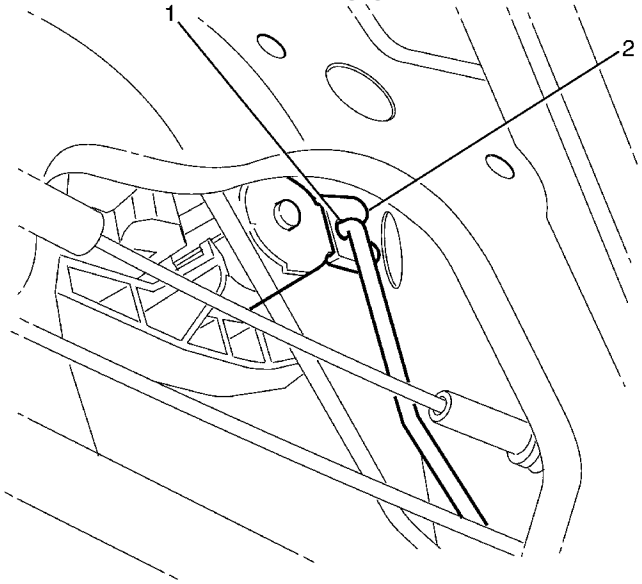

Important: The lock actuating rod (2) pushes into the lock cylinder retaining clip (1).

4. Install the lock actuating rod (1) to the lock cylinder retaining clip (2) (if fitted).

Important: Firmly press the water deflector where adhesive is applied to make sure water tight bond.

5. Install the rear half of the water deflector to the door panel.
6. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement.

Front Side Door Inside Handle Replacement

Removal Procedure

1. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement.

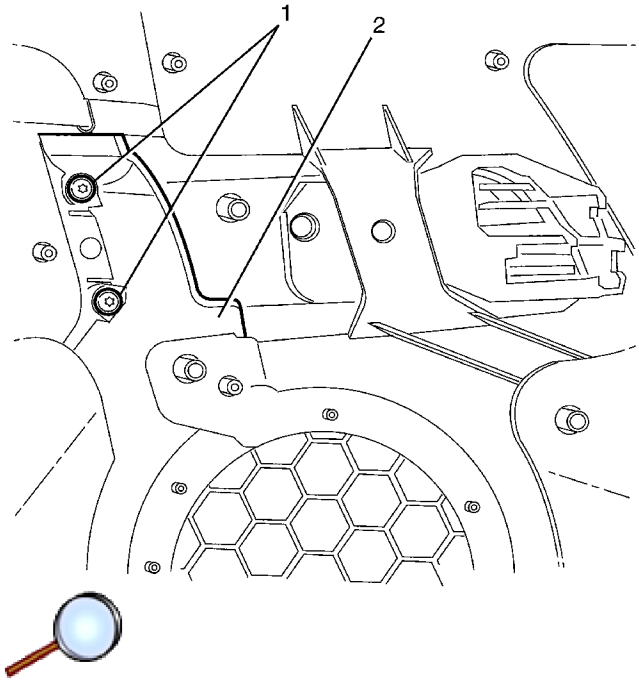

Important: The inside door handle to door trim panel retaining screws (1) are on the inside of the door trim panel (2).

2. Remove the inside door handle to door trim panel retaining screws (1).
3. Remove the inside door handle from the door trim panel (2).

Installation Procedure

1. Position the inside door handle to the door trim panel.

Notice: Refer to Fastener Notice in the Preface section.

© 2010 General Motors Corporation. All rights reserved.

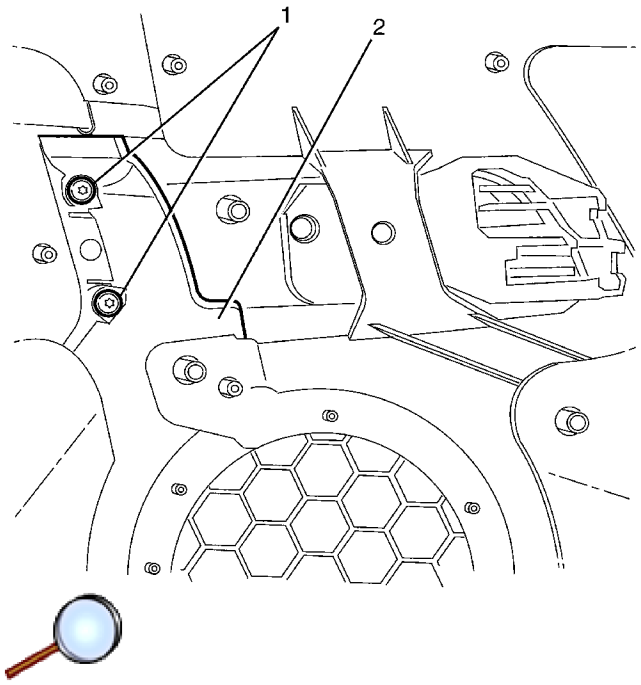

Important: The inside door handle to door trim panel retaining screws (1) are on the inside of the door trim panel (2).

2. Install the inside door handle to door trim panel retaining screws (1).

   Tighten
   Tighten the screws to 3 N-m (27 lb in).

3. Install the door trim panel (2). Refer to Front Side Door Trim Panel Replacement.

Front Side Door Outside Handle Replacement

Removal Procedure

1. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement.
2. Pull the rear half of the water deflector away from the door panel in order to access the outside door handle.

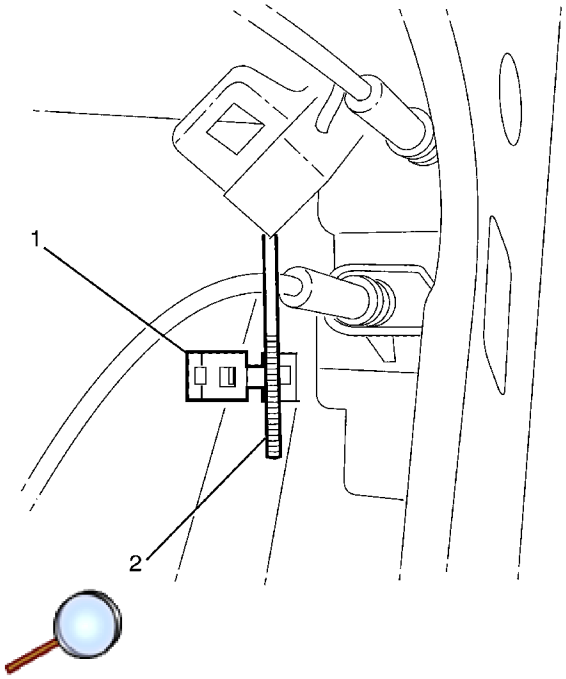

Important: Pry the outside door handle rod retaining clip (1) using a suitable tool.

3. Disconnect the outside door handle rod (2) from the door handle rod retaining clip (1).

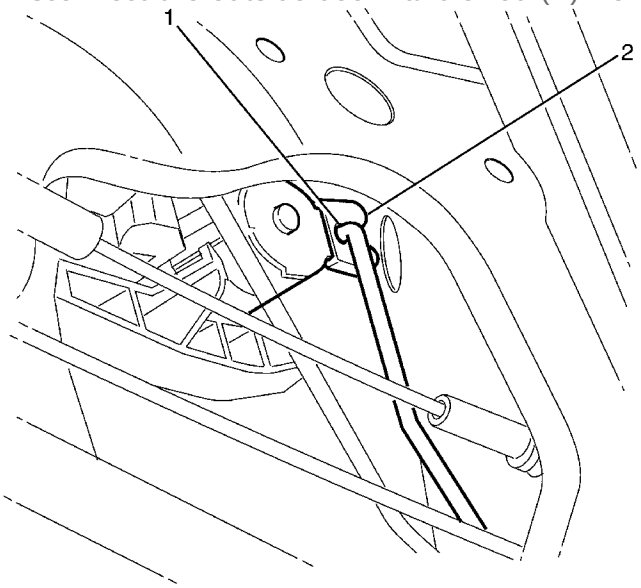

© 2010 General Motors Corporation. All rights reserved.

4. Remove the lock actuating rod (1) from the lock cylinder (2) (if fitted).

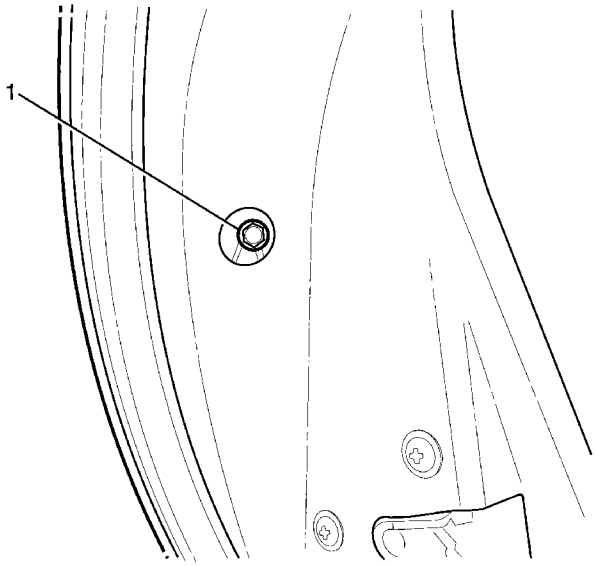

Important: Remove the rubber blanking grommet to allow access to the retaining bolt (1).

5. Remove the outside door handle to door retaining bolt (1).

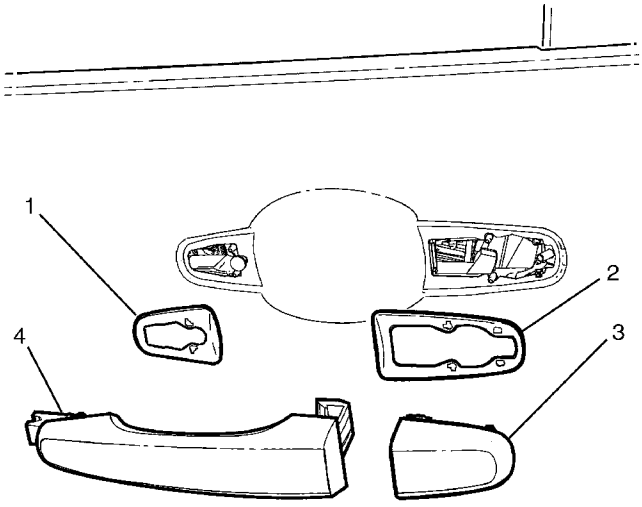

Important: Replace the gaskets (2, 3) when replacing the outside door handle (1, 4).

6. Remove the outside door handle (1, 4) from the door.

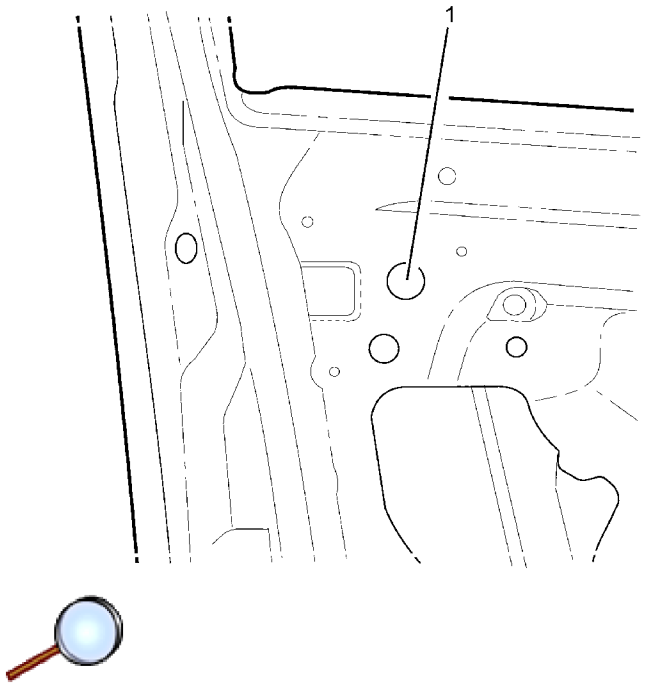

Important: The outside door handle retaining nut (1) must be loosened to remove the inner part of the outer door handle.

7. Loosen the outside door handle retaining nut (1).
8. Push on the outside door handle retaining nut and stud to relieve pressure between the inner part of the door handle and the door.

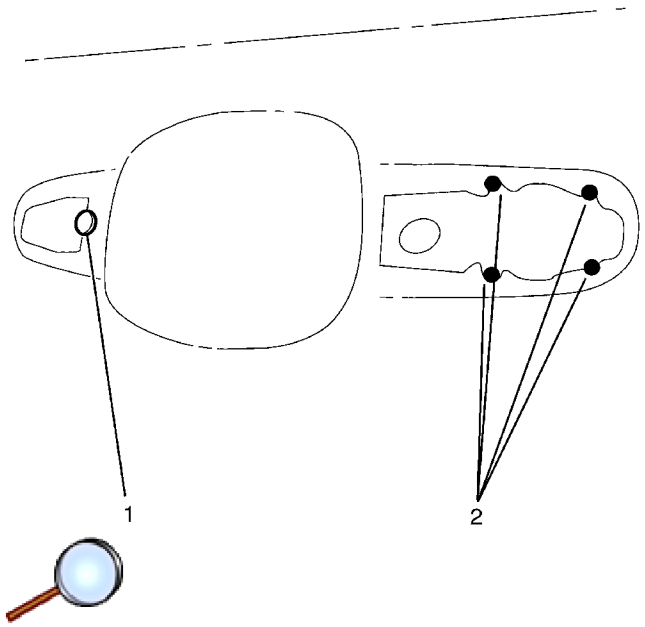

Important: Push the retaining tabs (2) inwards to release them then push the inner handle towards the front of the car to release the retaining pin (1).

9. Remove the inner part of the outer door handle (1, 2).

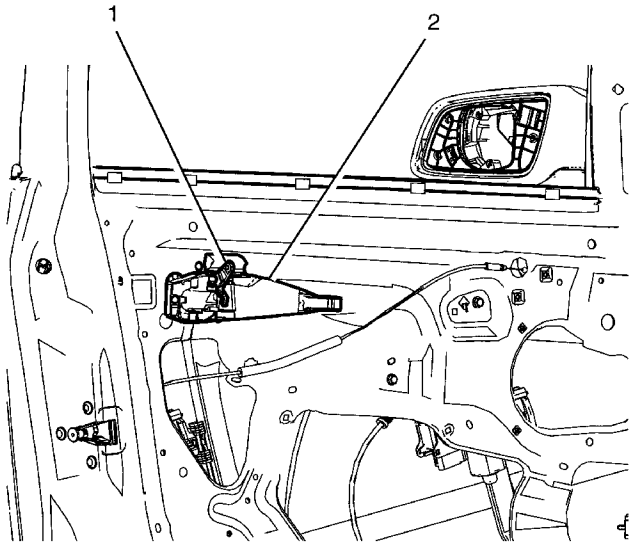

10. Remove the inner part (1) of the outer door handle from the door (2).

Installation Procedure

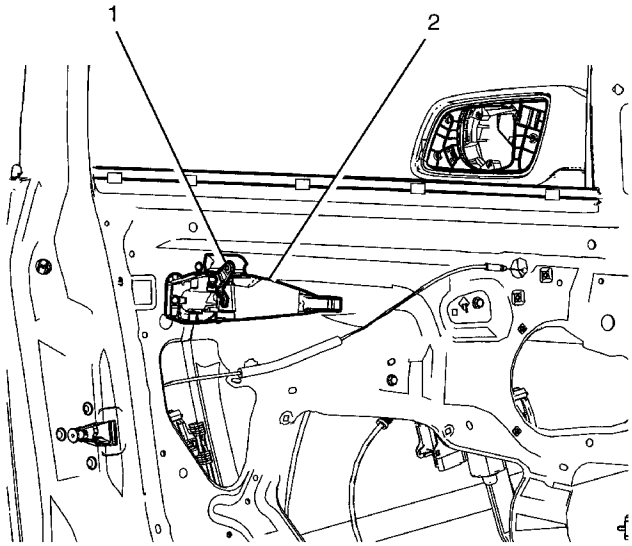

1. Position the inner part (1) of the outer door handle to the door (2).

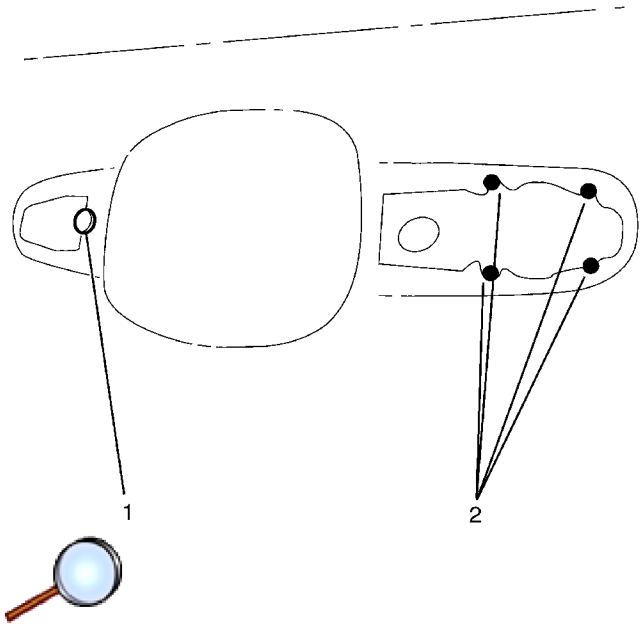

Important: Lock in the retaining pin (1) by pushing towards the rear of the car then outwards to engage the retaining tabs (2).

2. Position the inner part of the outer door handle (1, 2).

Notice: Refer to Fastener Notice in the Preface section.

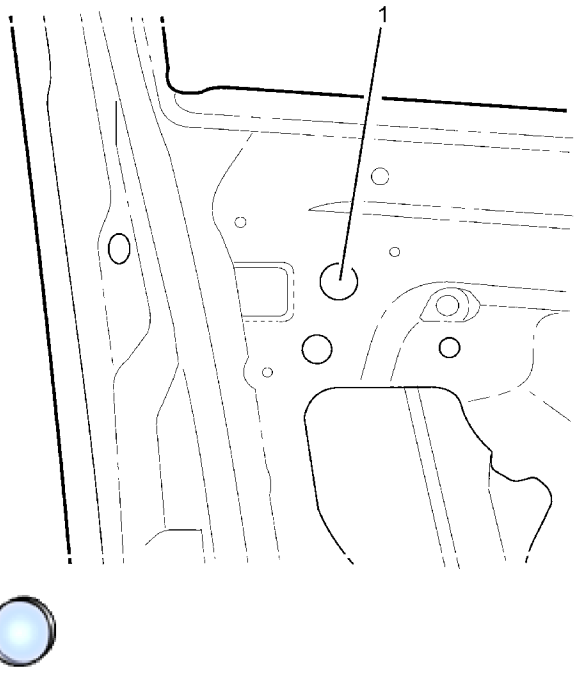

Important: The outside door handle retaining nut (1) must be tightened to fasten the inner part of the outer door handle.

3. Tighten the outside door handle retaining nut (1).

Tighten
Tighten the bolt to 4 N-m (35 lb in).



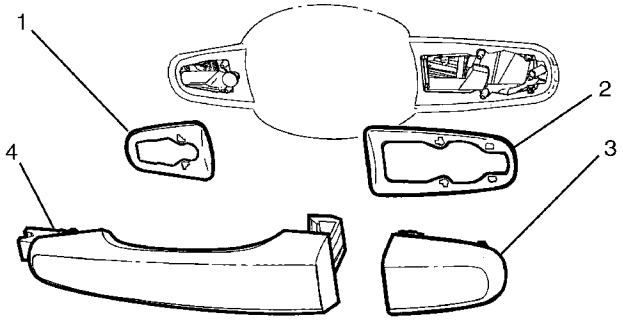

Important: Replace the gaskets (2, 3) when replacing the outside door handle (1, 4).

4. Position the outside door handle (1,4) to the door.

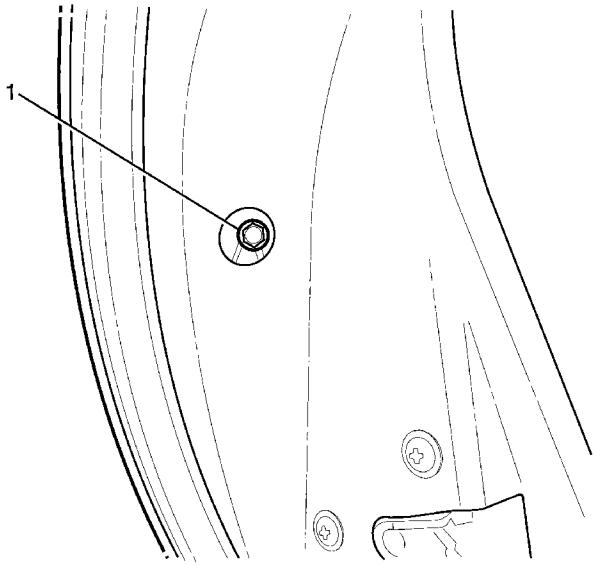

5. Install the outside door handle to door and retaining bolt (1).

Tighten

Tighten the bolt to 4 N-m (35 lb in).

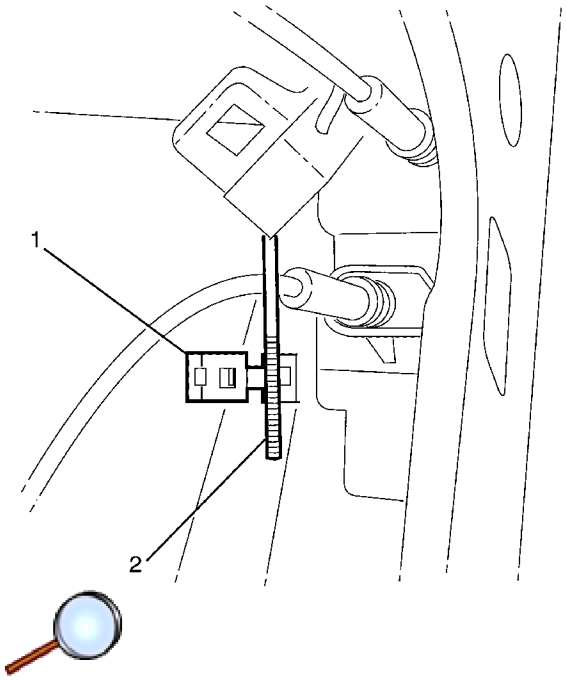

Important: Attach the door handle rod retaining clip (1) by pressing clip together over door handle rod until an audible click is heard.

6. Connect the outside door handle rod (2) to the door handle rod retaining clip (1).

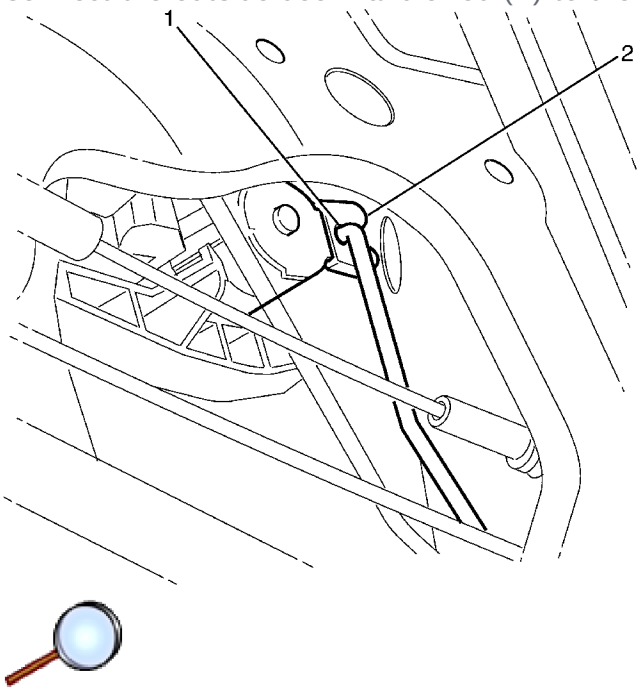

Important: The lock actuating rod (2) pushes into the lock cylinder retaining clip (1).

7. Install the lock actuating rod (1) to the lock cylinder retaining clip (2) (if fitted).

Important: Firmly press the water deflector where adhesive is applied to make sure water tight bond.

8. Install the rear half of the water deflector to the door panel.
9. Install the rubber blanking grommet.
10. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement.

Rear Side Door Inside Handle Replacement

Removal Procedure

1. Remove the door trim panel. Refer to Rear Side Door Trim Panel Replacement .

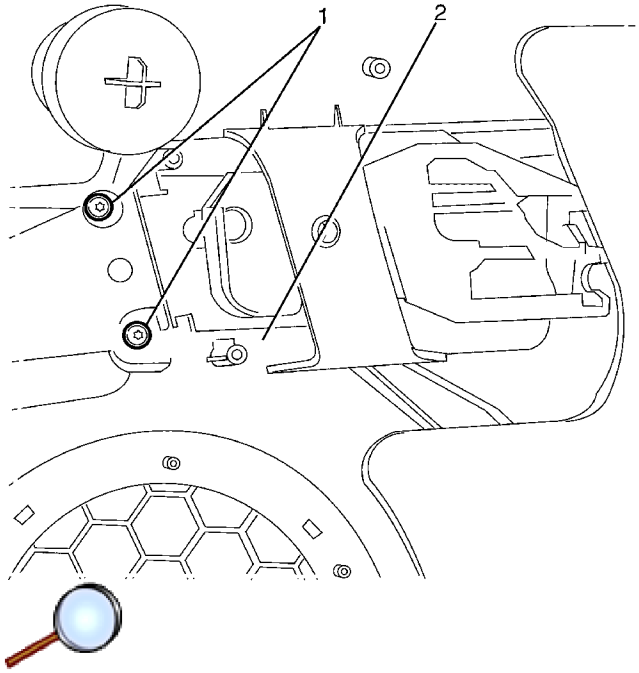

Important: The inside door handle to door trim panel retaining screws (1) are on the inside of the door trim panel (2).

2. Remove the inside door handle to door trim panel retaining screws (1).
3. Remove the inside door handle from the door trim panel (2).

Installation Procedure

1. Install the inside door handle to the door trim panel.

Notice: Refer to Fastener Notice in the Preface section.

© 2010 General Motors Corporation. All rights reserved.

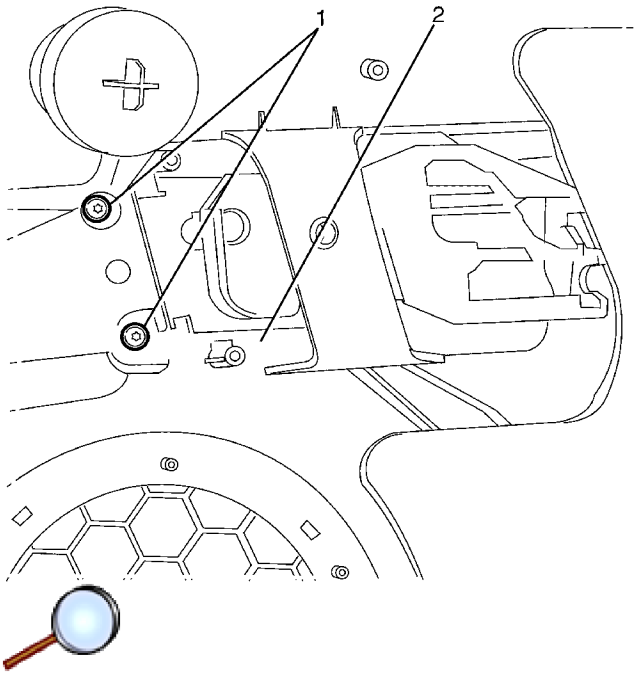

Important: The inside door handle to door trim panel retaining screws (1) are on the inside of the door trim panel (2).

2. Install the inside door handle to door trim panel retaining screws (1).

   Tighten
   Tighten the screws to 3 N-m (27 lb in).

3. Install the door trim panel (2). Refer to Rear Side Door Trim Panel Replacement .

Rear Side Door Outside Handle Replacement

Removal Procedure

1. Remove the door trim panel. Refer to Rear Side Door Trim Panel Replacement.
2. Pull the rear half of the water deflector away from the door panel in order to access the outside door handle.

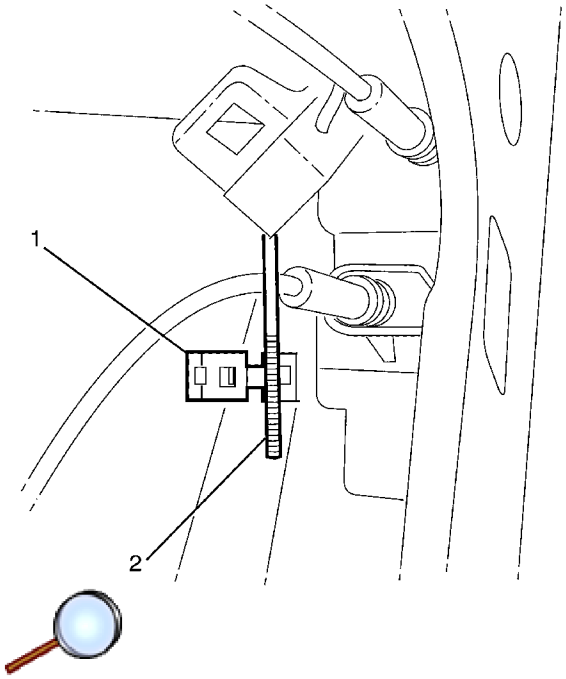

Important: Pry the outside door handle rod retaining clip (1) using a suitable tool.

3. Disconnect the outside door handle rod (2) from the door handle rod retaining clip (1).

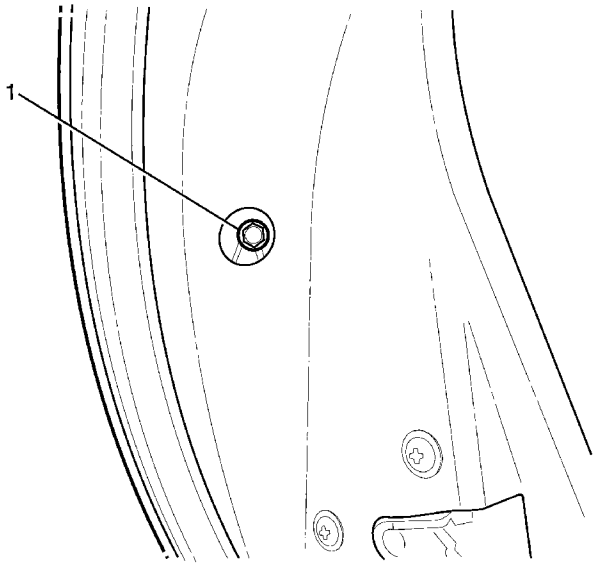

© 2010 General Motors Corporation. All rights reserved.

Important: Remove the rubber blanking grommet to expose lock cylinder retaining bolt (1).

4. Remove the outside door handle to door retaining bolt (1).

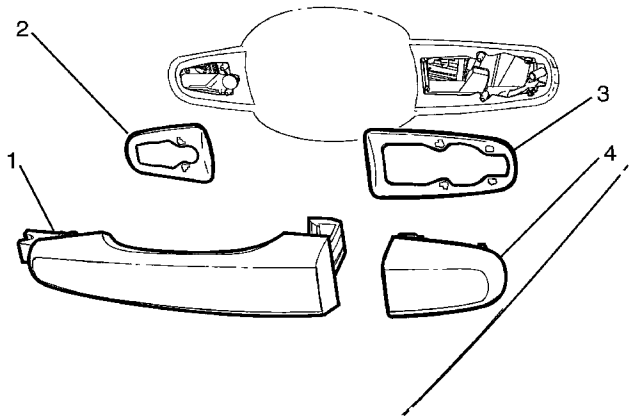

Important: Replace the gaskets (2, 3) when replacing the outside door handle (1, 4).

5. Remove the outside door handle (1, 4) from the door.

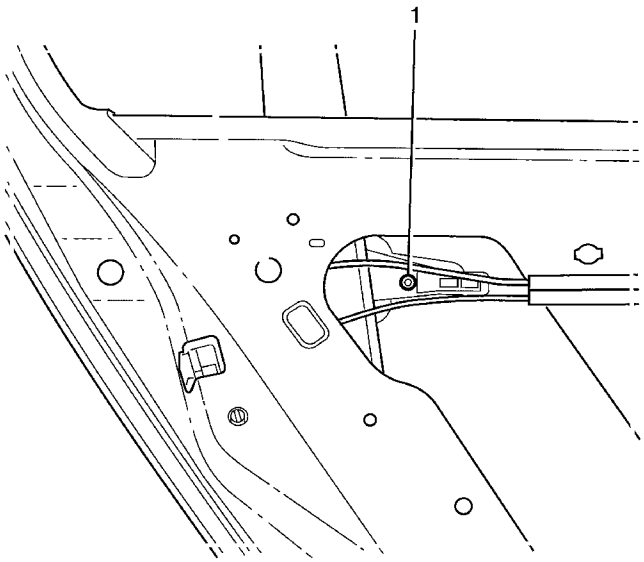

Important: The outside door handle retaining nut (1) must be loosened to remove the inner

part of the outer door handle.

6. Loosen the outside door handle retaining nut (1).
7. Push on the outside door handle retaining nut and stud to relieve pressure between the inner part of the door handle and the door.

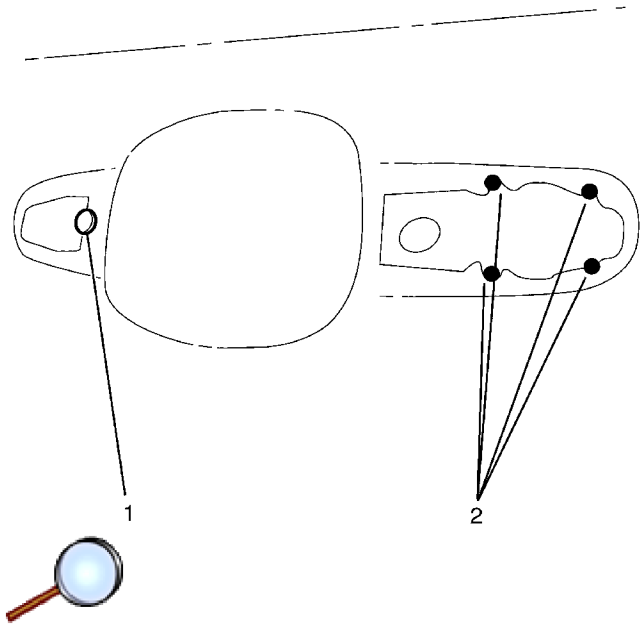

Important: Push the retaining tabs (2) inwards to release them then push the inner handle towards the front of the car to release the retaining pin (1).

8. Remove the inner part of the outer door handle (1, 2).

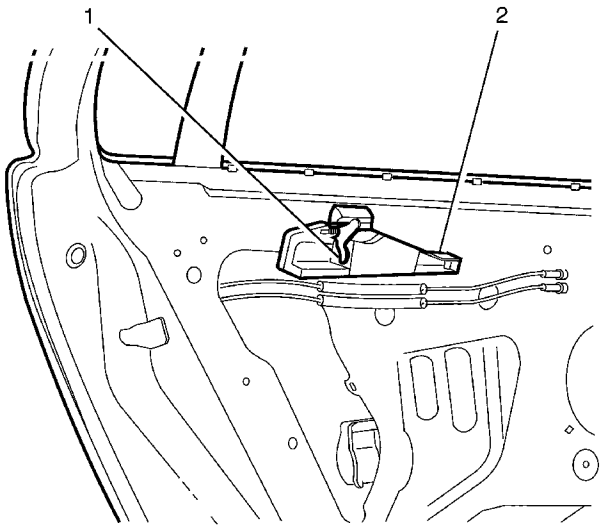

9. Remove the inner part (1) of the outer door handle from the door (2).

Installation Procedure

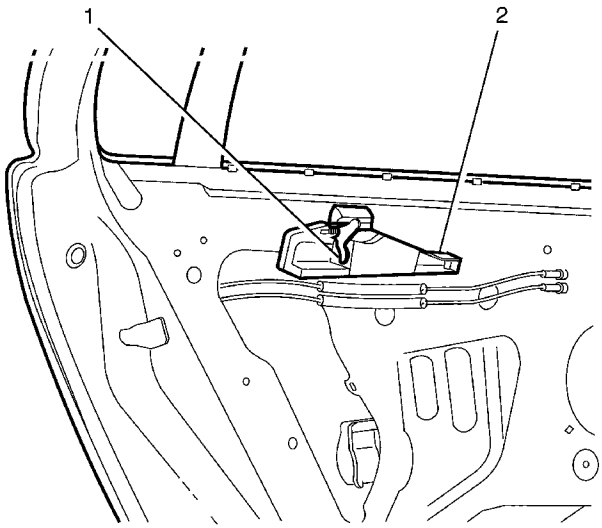

1. Position the inner part (1) of the outer door handle to the door (2).

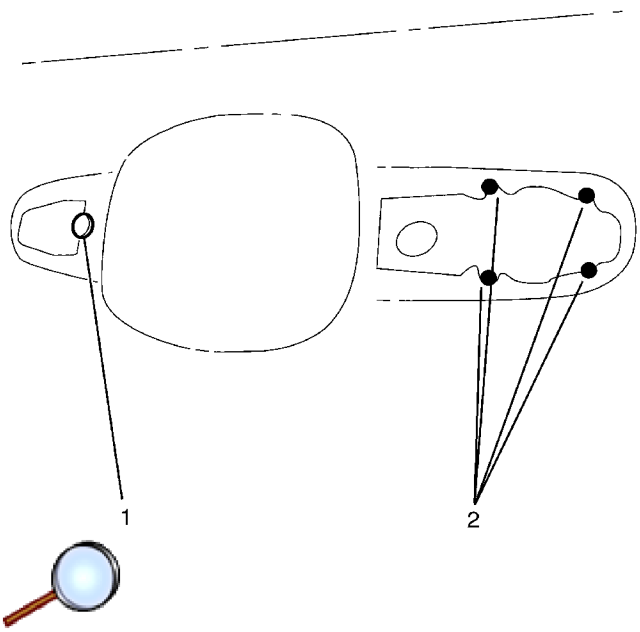

Important: Lock in the retaining pin (1) by pushing towards the rear of the car then outwards to engage the retaining tabs (2).

2. Install the inner part of the outer door handle (1, 2).

Notice: Refer to Fastener Notice in the Preface section.

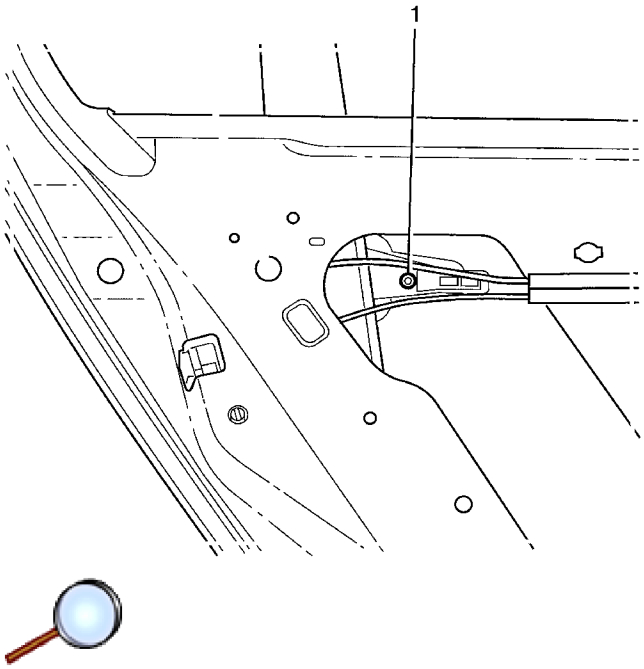

Important: The outside door handle retaining nut (1) must be tightened to fasten the inner part of the outer door handle.

3. Tighten the outside door handle retaining nut (1).

Tighten
Tighten the bolt to 4 N-m (35 lb in).

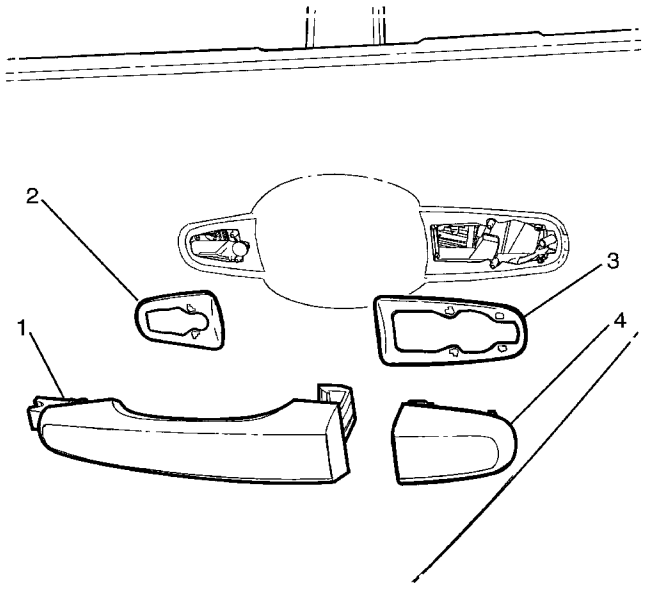

Important: Replace gaskets (2, 3) when replacing the outside door handle (1, 4).

4. Install the outside door handle (1, 4).

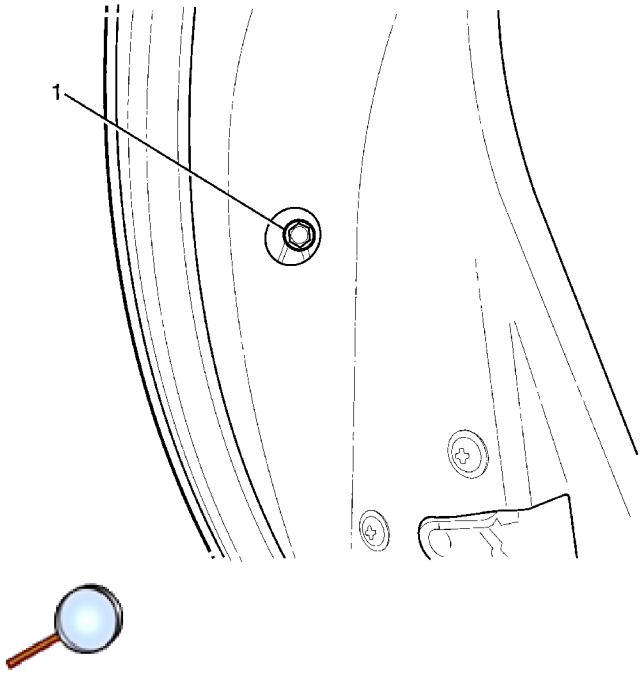

5. Install the outside door handle to door retaining bolt (1).

Tighten
Tighten the bolt to 4 N-m (35 lb in).

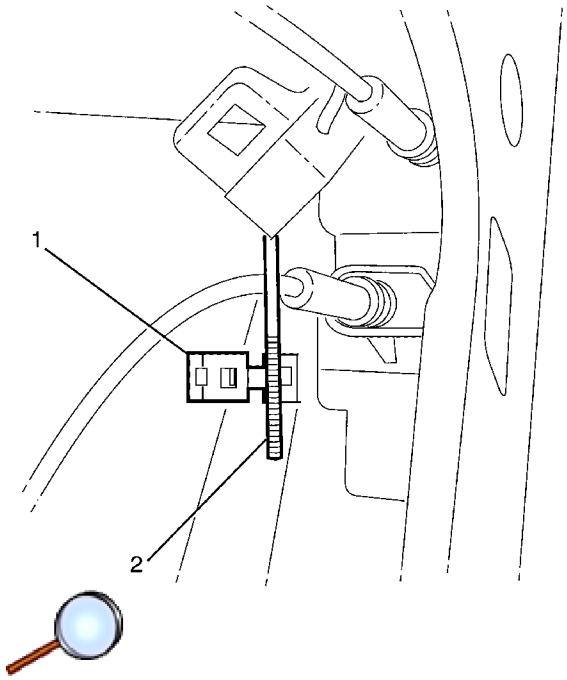

Important: Attach the door handle rod retaining clip (1) by pressing clip together over door handle rod until an audible click is heard.

6. Connect the outside door handle rod (2) to the door handle rod retaining clip (1).

Important: Firmly press the water deflector where adhesive is applied to make sure of a water tight bond.

7. Install the rear half of the water deflector to the door panel.
8. Install the rubber blanking grommet.
9. Install the door trim panel. Refer to Rear Side Door Trim Panel Replacement.

Front Side Door Latch Replacement

Removal Procedure

1. Raise the window to the full up position.
2. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement.
3. Pull the rear half of the water deflector away from the door panel in order to access the door handle and door lock.

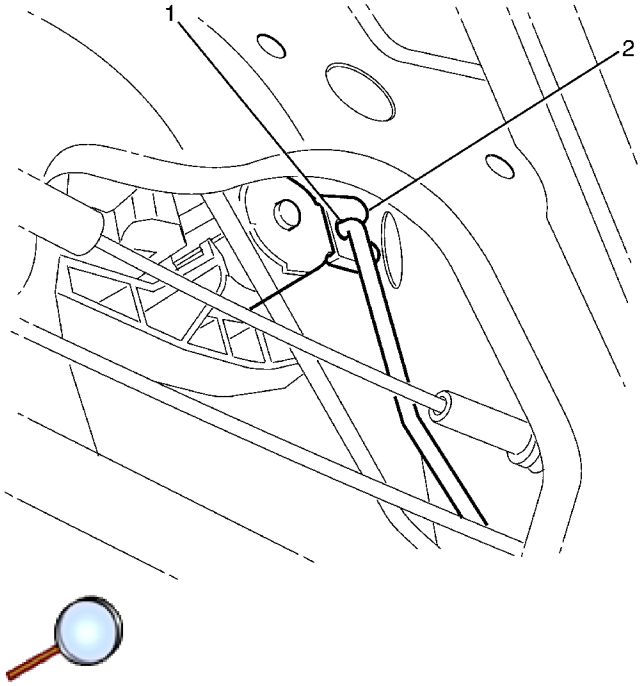

Important: The lock actuating rod (1) is only fitted to the drivers door handle.

4. Remove the lock actuating rod (1) from the door lock cylinder (2) (if fitted).

© 2010 General Motors Corporation. All rights reserved.

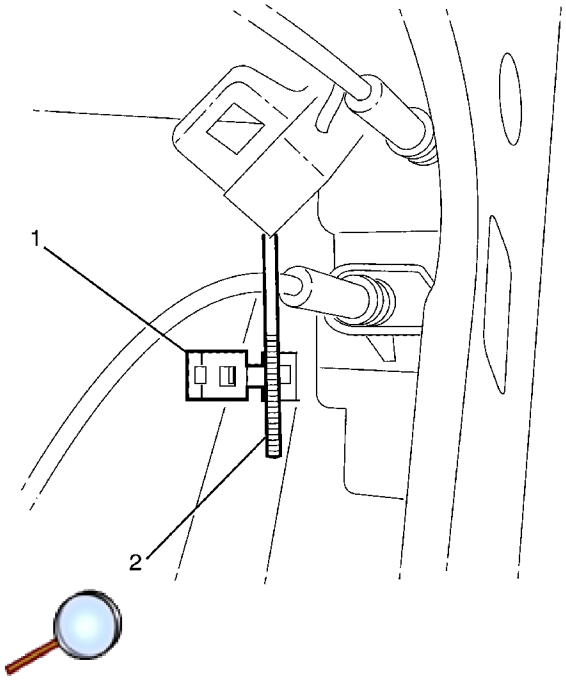

Important: Pry the outside door handle rod retaining clip (1) using a suitable tool.

5. Disconnect the outside door handle rod (2) from the door handle rod retaining clip (1).

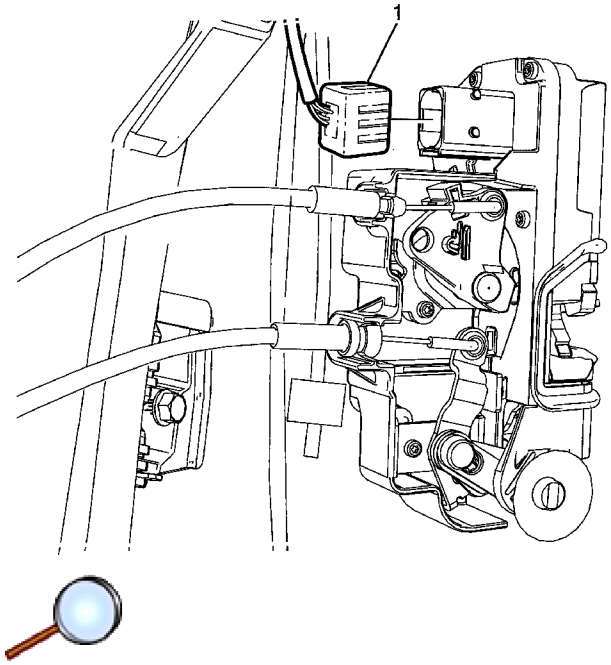

6. Disconnect the door latch electrical connector (1).

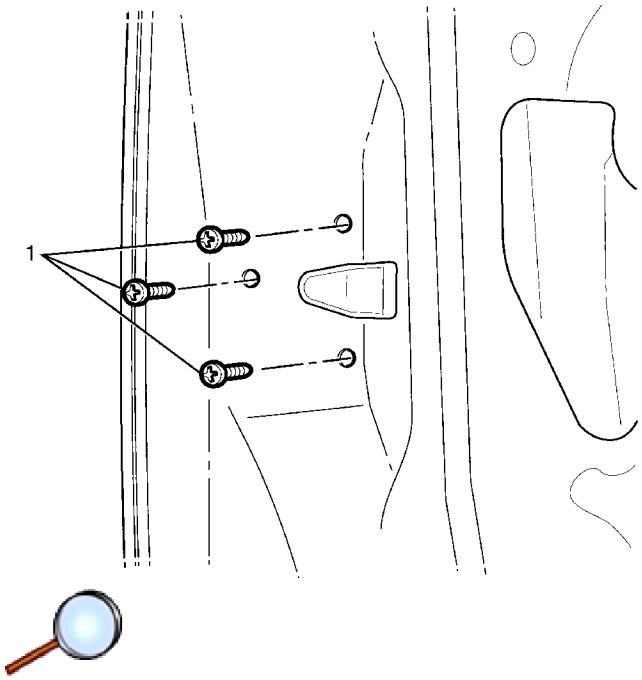

Important: The door latch to door retaining screws (2) are single use parts and must be discarded after use.

Important: Support door latch when removing the door latch to door retaining screws (1).

7. Remove the door latch to door retaining screws (1).

   Discard the screws.

8. Remove the door latch from the door with the inside door handle cable, inside door lock cable and lock actuator rod (if fitted) attached.
9. Disconnect the inside door handle cable and inside door lock cable from the door latch. Refer to Front Side Door Inside Handle Cable Replacement.
10. Disconnect the lock rod (if fitted) from the door latch.

Installation Procedure

1. Connect the lock rod (if fitted) to the door latch.
2. Connect the inside door handle cable and inside door lock cable to the door latch. Refer to Front Side Door Inside Handle Cable Replacement.

   Important: Position the door latch through the door cavity and support.

3. Position the door latch into the door.

   Notice: Refer to Fastener Notice in the Preface section.

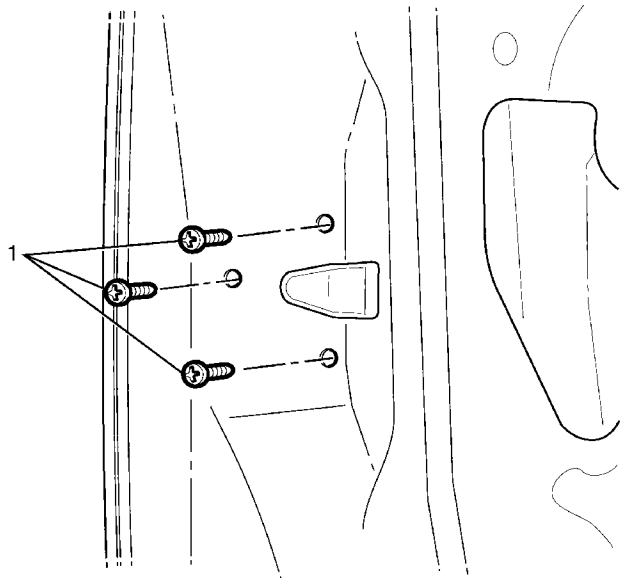

4. Install the door latch to door NEW retaining screws (1).

Tighten
Tighten the screws to 13 N-m (115 lb in).

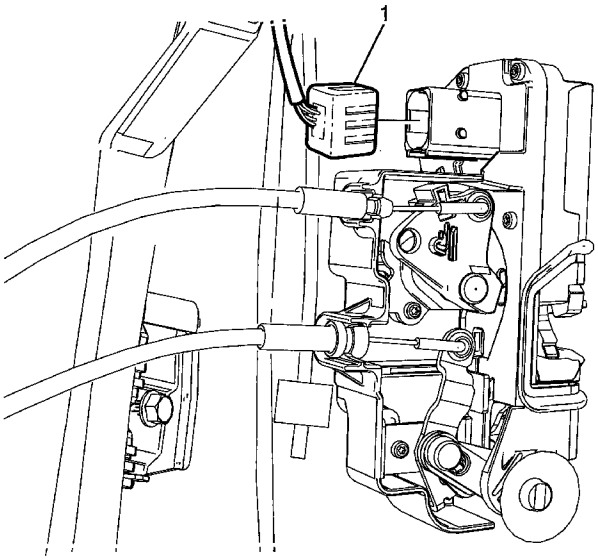

5. Connect the door latch electrical connector (1).

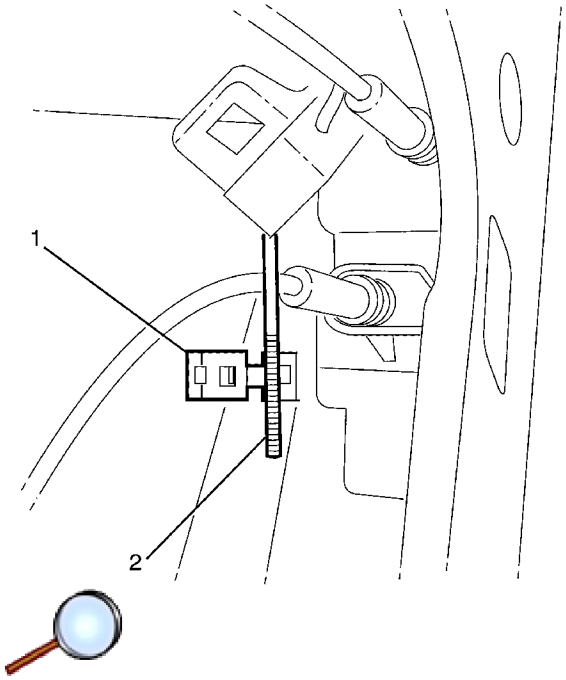

Important: Attach the door handle rod retaining clip (1) by pressing clip together over door handle rod until an audible click is heard.

6. Connect the outside door handle rod (2) to the door handle rod retaining clip (1).

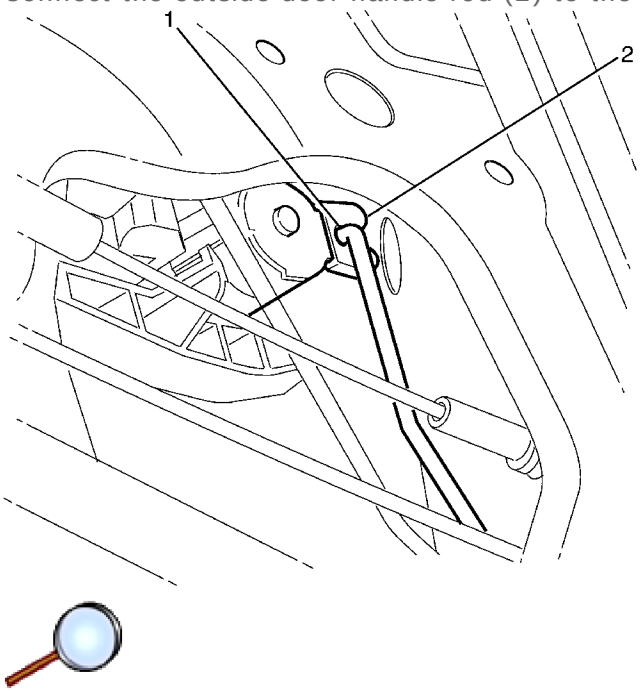

Important: The lock actuating rod (2) pushes into the lock cylinder retaining clip (1).

7. Install the lock actuating rod (1) to the lock cylinder retaining clip (2) (if fitted).
8. Inspect for the correct operation of the door handle, lock cylinder (if fitted), and door latch.

Important: Firmly press the water deflector where adhesive is applied to make sure water tight bond.

9. Install the rear half of the water deflector to the door panel.
10. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement.

Rear Compartment Lid Latch Replacement

Removal Procedure

Important: When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.

1. Support the rear compartment lid with a suitable brace.
2. Remove the rear end trim panel. Refer to Rear Compartment Trim Panel Replacement in Interior Trim.

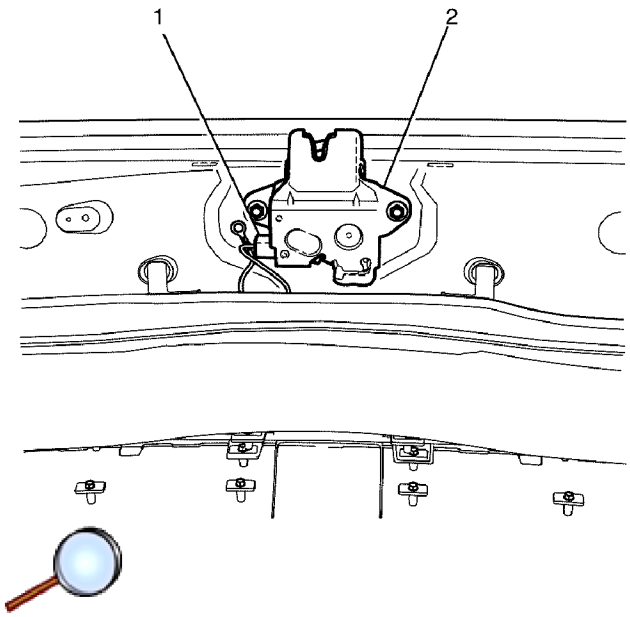

3. Disconnect the electrical connector (1) from the rear compartment lid lock actuator (2).

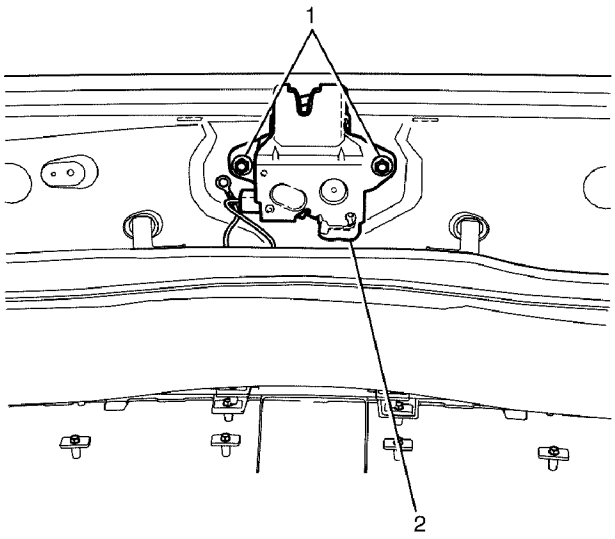

© 2010 General Motors Corporation. All rights reserved.

4. Remove the rear compartment lid lock actuator to rear compartment retaining bolts (1).
5. Remove the rear compartment lid lock actuator (2) from the vehicle.

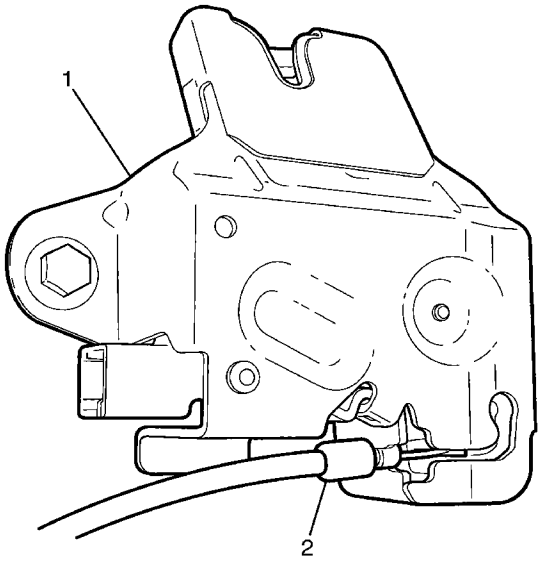

6. Disconnect the rear compartment lid release cable (2) from the rear compartment lid lock actuator (1).

Installation Procedure

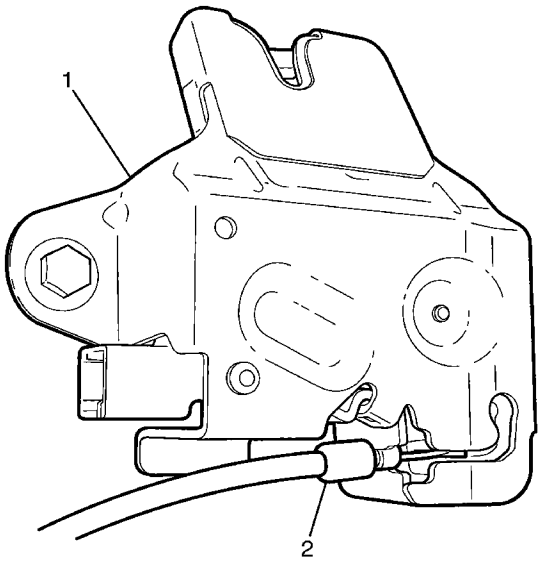

1. Connect the rear compartment lid release cable (2) to the rear compartment lid lock actuator (1).

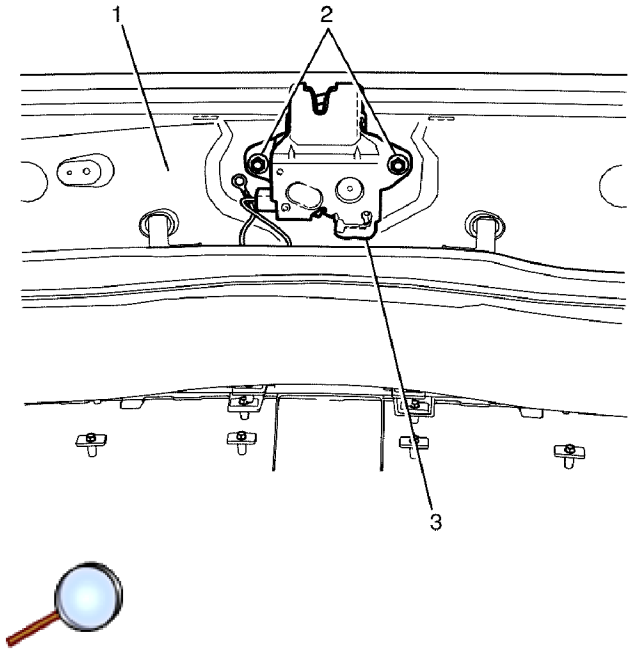

2. Install the rear compartment lid lock actuator (3) to the rear compartment (1).

   Important: Do not fully tighten the retaining bolts to the rear compartment lid lock actuator.

3. Install the rear compartment lid lock actuator to the rear compartment retaining bolts (2).

   Do not fully tighten at this stage.

4. Adjust the rear compartment lid lock actuator. Refer to Rear Compartment Lid Adjustment.

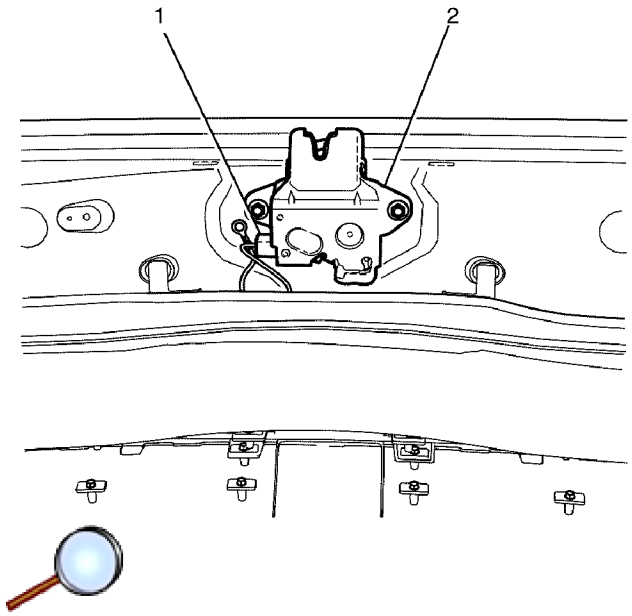

5. Connect the electrical connector (1) to the rear compartment lid lock actuator (2).

   Notice: Refer to Fastener Notice in the Preface section.

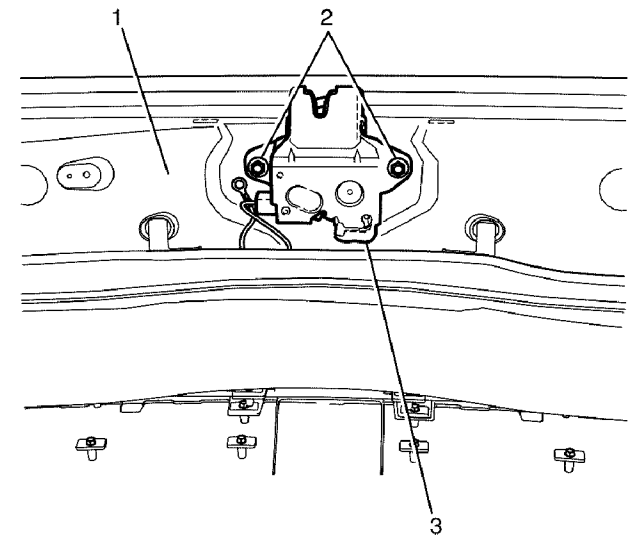

6. Tighten the rear compartment lid lock actuator to the rear compartment retaining bolts (2).

   Tighten
   Tighten the bolts to 9 N·m (80 lb in).

7. If re-programming is required. Refer to Control Module References.
8. Install the rear end trim panel. Refer to Rear Compartment Trim Panel Replacement in Interior Trim.
9. Remove the suitable brace from the vehicle.

Rear Side Door Latch Replacement

Removal Procedure

1. Raise the window to the full up position.
2. Remove the door trim panel. Refer to Rear Side Door Trim Panel Replacement.
3. Pull the rear half of the water deflector away from the door panel in order to access the door latch.

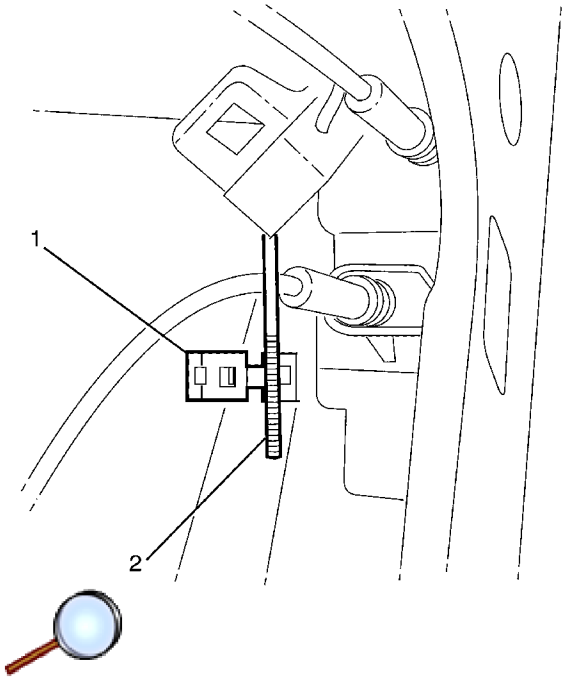

Important: Pry the outside door handle rod retaining clip (1) using a suitable tool.

4. Disconnect the outside door handle rod (1) from the door latch (2).

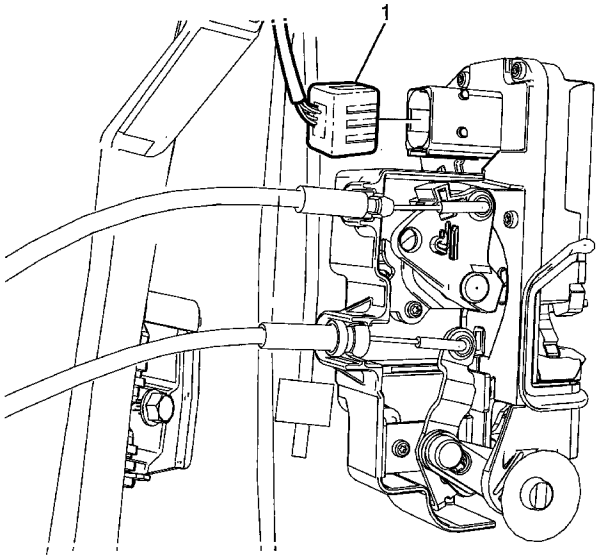

© 2010 General Motors Corporation. All rights reserved.

5. Disconnect the door latch electrical connector (1).

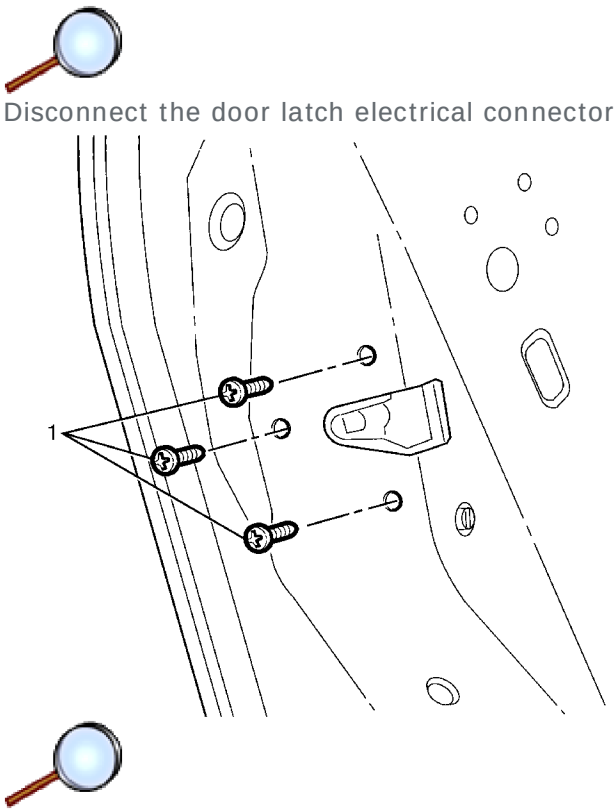

Important: The door latch to door retaining screws (2) are single use parts and must be discarded after use.

Important: Support the door latch when removing the door latch retaining screws (1).

6. Remove the door latch to door retaining screws (1).

   Discard the screws.

   Important: Remove the door latch through the door cavity.

7. Remove the door latch from the door with the inside door handle cable and inside door lock cable attached.
8. Disconnect the inside door handle cable and inside door lock cable from the door latch. Refer to Rear Side Door Inside Handle Cable Replacement.

Installation Procedure

1. Connect the inside door handle cable and inside door lock cable to the door latch. Refer to Rear Side Door Inside Handle Cable Replacement.

   Important: Position the door latch through the door cavity and support. .

2. Position the door latch into the door.

   Notice: Refer to Fastener Notice in the Preface section.

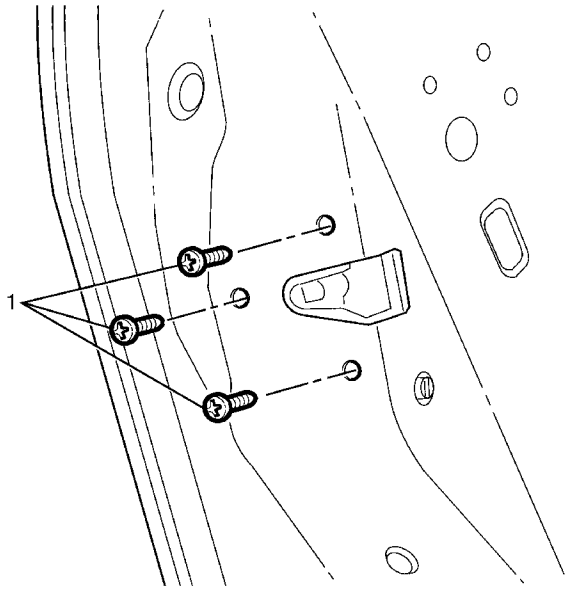

3. Install the door latch to door NEW retaining screws (1).

Tighten
Tighten the screws to 13 N-m (115 lb in).

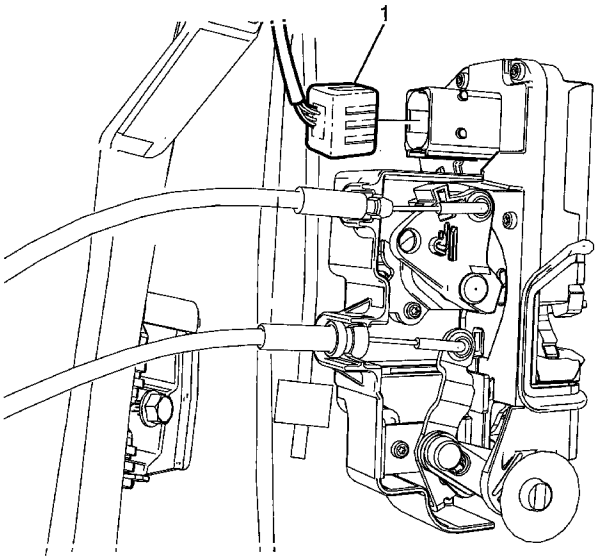

4. Connect the door latch electrical connector (1).

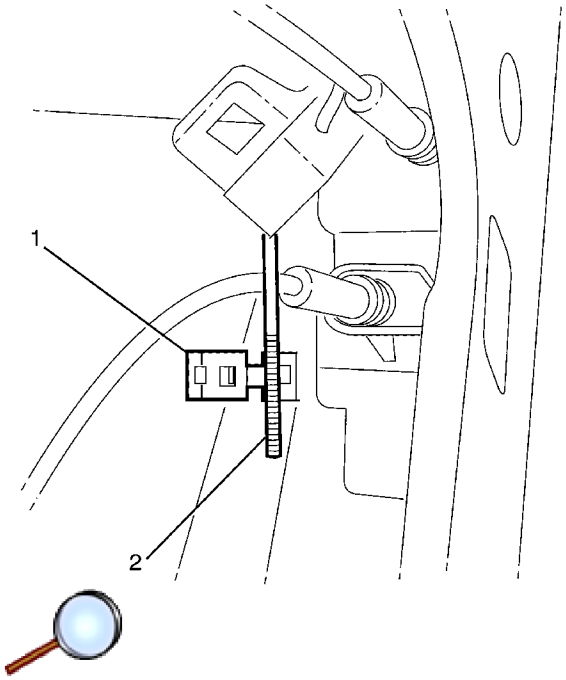

Important: Attach the door handle rod retaining clip (1) by pressing clip together over door handle rod until an audible click is heard.

5. Connect the outside door handle rod (2) to the door handle rod retaining clip (1).
6. Inspect for the correct operation of the door handle and door latch.

Important: Firmly press the water deflector where adhesive is applied to make sure of a water tight bond.

7. Install the rear half of the water deflector to the door panel.
8. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement.

Front Door Module Replacement

Removal Procedure

Caution: Refer to Safety Glasses Caution in the Preface section.

1. Disconnect the negative battery cable. Refer to Battery Negative Cable Disconnection and Connection.
2. Remove the closeout/insulator panel. Refer to Instrument Panel Insulator Panel Replacement - Right Side.
3. Remove the knee bolster. Refer to Knee Bolster Replacement.
4. Remove the hinge pillar trim panel. Refer to Body Hinge Pillar Trim Panel Replacement.

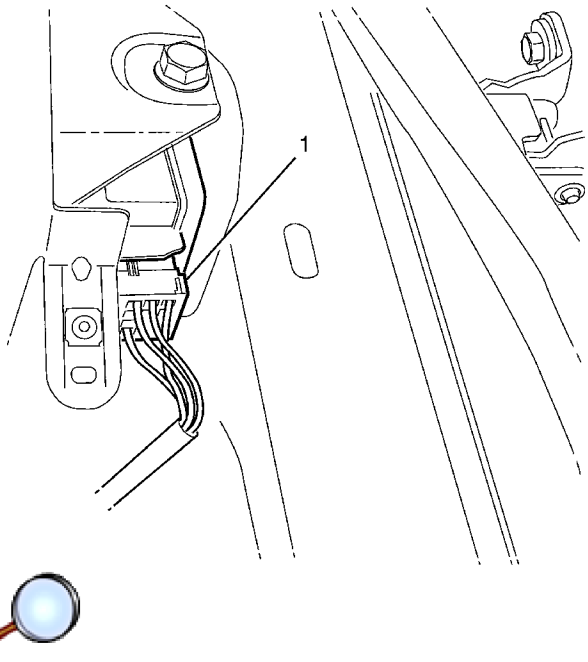

5. Disconnect the door module electrical connector (1).

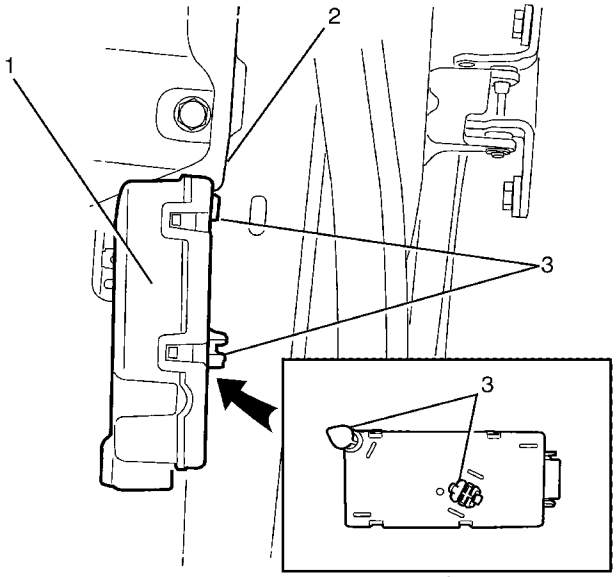

© 2010 General Motors Corporation. All rights reserved.

Important: The door module is located on the right side just under the instrument panel attached to the body.

Important: Pry the door module (1) with a suitable flat bladed tool then manoeuvre to release top locating retainer (3).

6. Pry the door module (1) with a suitable flat bladed tool to release the retainers (3).
7. Remove the door module (1) from the vehicle (2).

Installation Procedure

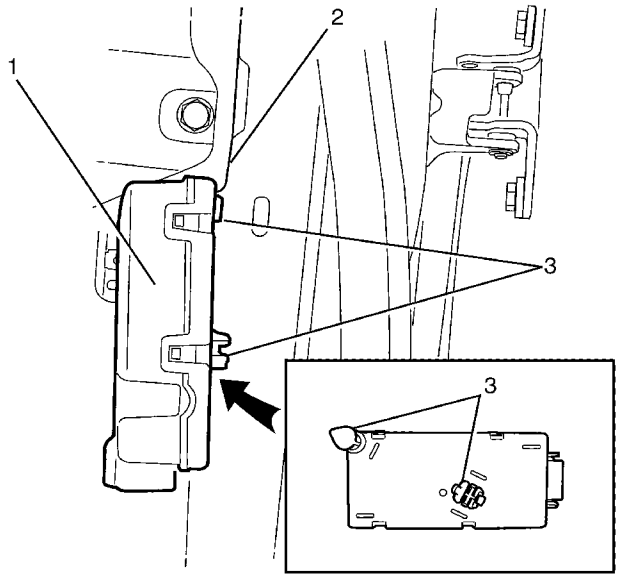

1. Position the door module (1) to the vehicle (2).

Important: Locate the top retainer first then press to engage the lower retainer.

2. Install the door module (1) and push to secure the retainers (3).

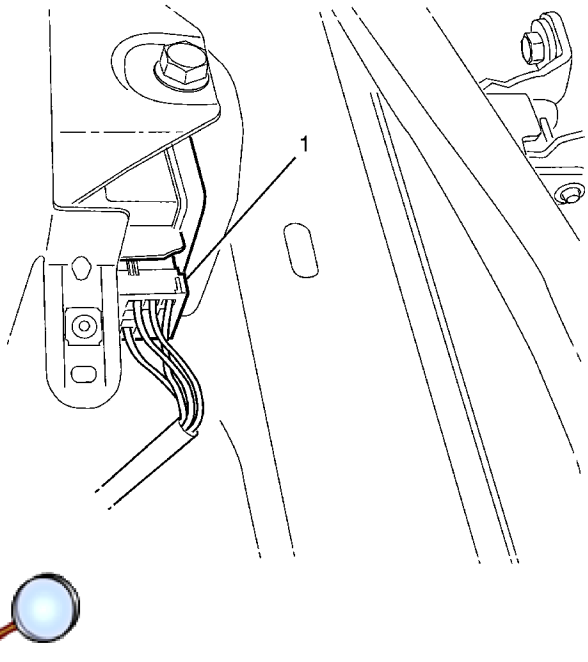

3. Connect the door module electrical connector (1).
4. Install the hinge pillar trim panel. Refer to Body Hinge Pillar Trim Panel Replacement.
5. Install the knee bolster. Refer to Knee Bolster Replacement.
6. Install the closeout/insulator panel. Refer to Instrument Panel Insulator Panel Replacement - Right Side.
7. Connect the negative battery cable. Refer to Battery Negative Cable Disconnection and Connection.
8. If re-programming is required. Refer to Control Module References.

Front Side Door Inside Handle Cable Replacement

Removal Procedure - Door Handle Cable

1. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement.
2. Remove the water deflector. Refer to Front Side Door Water Deflector Replacement.
3. Remove the door latch. Refer to Front Side Door Latch Replacement.

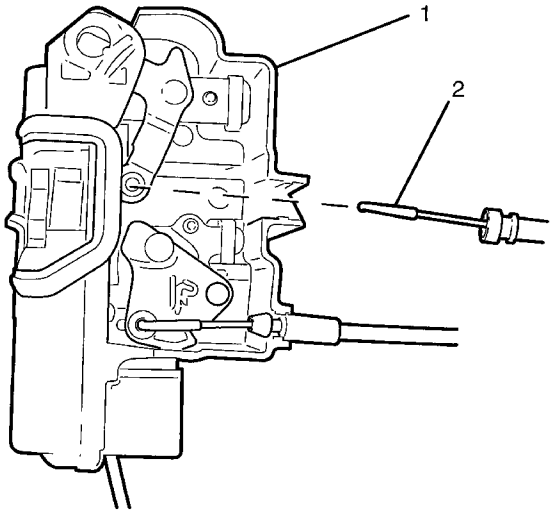

4. Disconnect the door handle cable (2) from the door latch (1).

Installation Procedure - Door Handle Cable

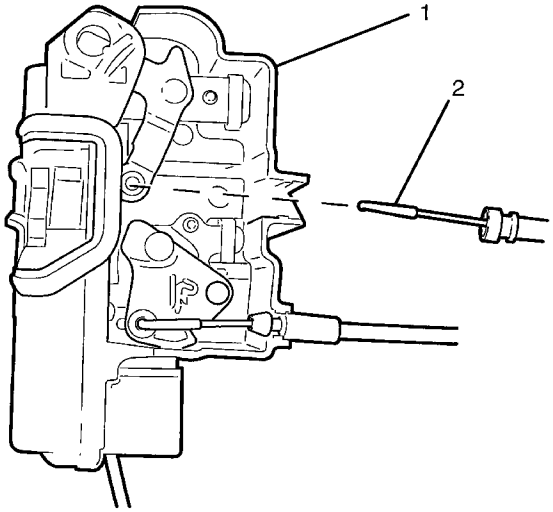

© 2010 General Motors Corporation. All rights reserved.

1. Connect the door handle cable (2) to the door latch (1).
2. Install the door latch. Refer to Front Side Door Latch Replacement.
3. Install the water deflector. Refer to Front Side Door Water Deflector Replacement.
4. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement.

Removal Procedure - Lock Cable

1. Remove the door trim panel. Refer to Front Side Door Trim Panel Replacement.
2. Remove the water deflector. Refer to Front Side Door Water Deflector Replacement.
3. Remove the door latch. Refer to Front Side Door Latch Replacement.

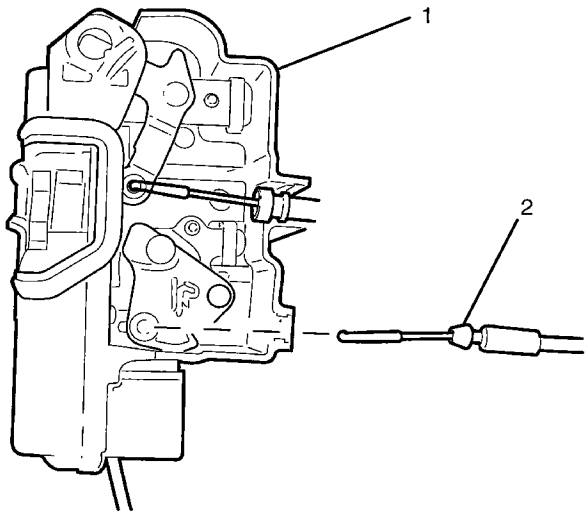

4. Disconnect the door lock cable (2) from the door latch (1).

Installation Procedure - Lock Cable

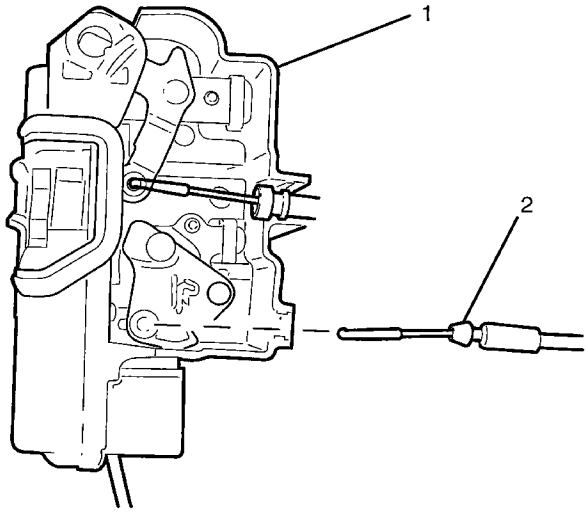

1. Connect the lock handle cable (2) to the door latch (1).
2. Install the door latch. Refer to Front Side Door Latch Replacement.
3. Install the water deflector. Refer to Front Side Door Water Deflector Replacement.
4. Install the door trim panel. Refer to Front Side Door Trim Panel Replacement.

Door Lock Striker Adjustment

Caution: Striker alignment is crucial for proper operation of the door systems. Do not hit the striker with a hammer or force alignment in any other way. Failure to properly adjust striker will result in excessive door efforts or extensive damage to door system operation which could result in personal injury.

Important: If the door vibrates vertically on opening (shimmy's), adjust the striker higher relative to the latch and achieve beltline flushness by other means.

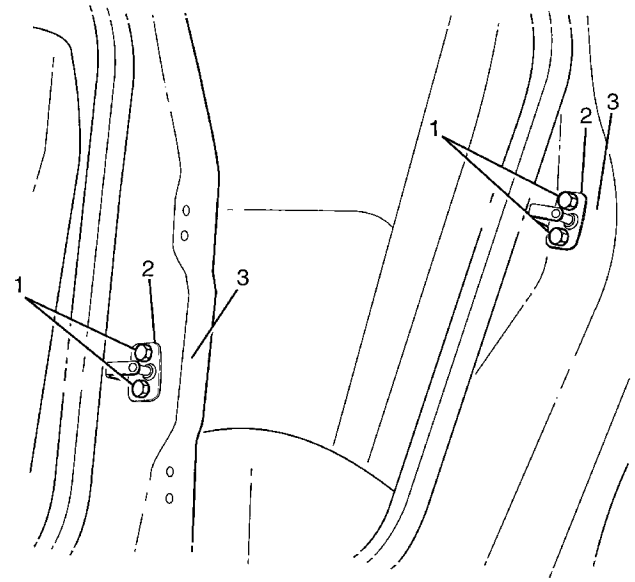

1. Loosen the door striker to pillar retaining screws (1).
2. Pull the door striker (2) outboard on the pillar (3) to the end of the adjustment travel.

Important: The door striker retaining screws (1) must not be fully tightened at this stage.

3. Tighten the door striker retaining screws (1) so that the door striker (2) can still be moved.
4. Hold the outside door handle out and gently push the door flush against the body in order to locate the door striker (2).
5. Slowly open the door.

Notice: Refer to Fastener Notice in the Preface section.

6. Tighten the door striker to pillar retaining screws (2).

Tighten
Tighten the door striker screws to 13 N-m (115 lb in).

© 2010 General Motors Corporation. All rights reserved.

Door Striker Replacement

Removal Procedure

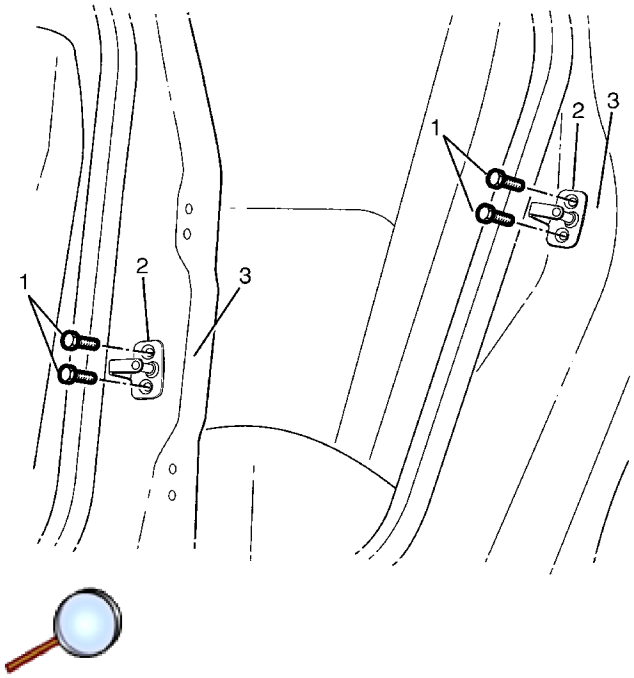

Important: Mark the door striker (2) location before removing the door striker to pillar retaining screws (1) to aid in installation.

1. Remove the door striker to pillar retaining screws (1).
2. Remove the door striker (2) from the pillar (3).

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

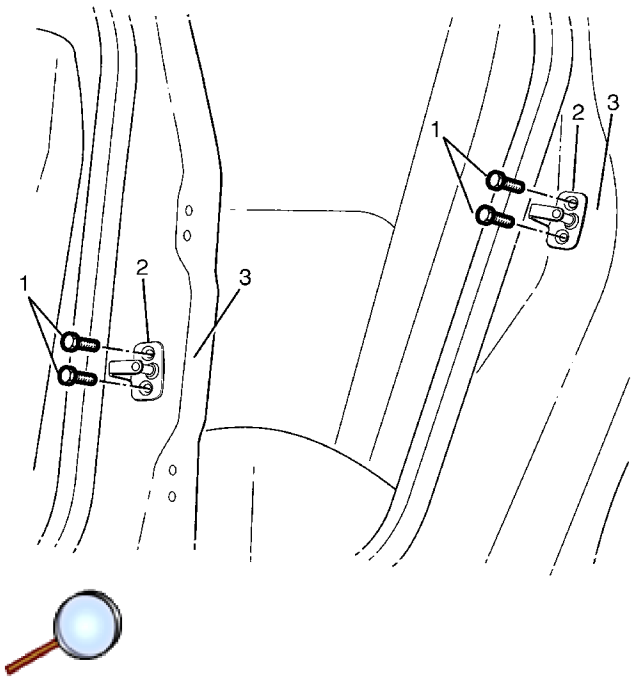

Important: The door striker to pillar retaining screws (1) must not be fully tightened at this stage.

Important: Align the door striker (2) to the marks made to the pillar (3) prior to removal.

1. Install the door striker to pillar retaining screws (1).

   Caution: Striker alignment is crucial for proper operation of the door systems. Do not hit the striker with a hammer or force alignment in any other way. Failure to properly adjust striker will result in excessive door efforts or extensive damage to door system operation which could result in personal injury.

2. Align the door striker (2). Refer to Door Lock Striker Adjustment in Doors.

   Notice: Refer to Fastener Notice in the Preface section.

3. Tighten the door striker (2) to pillar retaining screws (1).

   Tighten
   Tighten the door striker screws to 13 N-m (115 lb in).

Rear Compartment Lid Latch Striker Replacement

Removal Procedure

Important: When a suitable hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.

1. Support the rear compartment lid with a suitable brace.

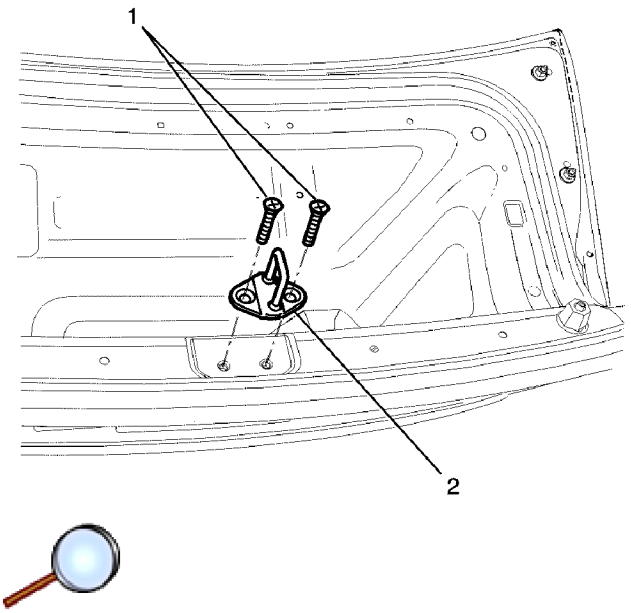

2. Remove the rear compartment lid latch striker to rear compartment lid retaining torx screws (1).
3. Remove the rear compartment lid latch striker (2).

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

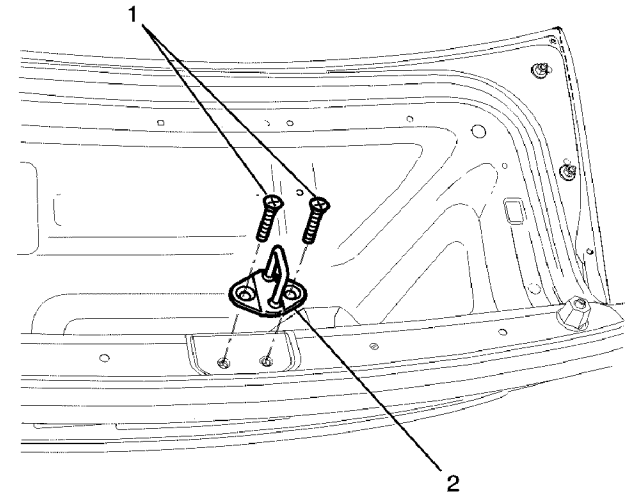

1. Position the rear compartment lid latch striker (2) to the rear compartment lid.

   Notice: Refer to Fastener Notice in the Preface section.

2. Install the rear compartment lid latch striker to rear compartment lid retaining torx screws (1).

   Tighten
   Tighten the torx screws to 25 N·m (18 lb ft).

3. Remove the suitable brace from the vehicle.

Rear Compartment Lid Release Switch Replacement

Removal Procedure

1. Remove the instrument panel compartment. Refer to Instrument Panel Compartment Replacement.

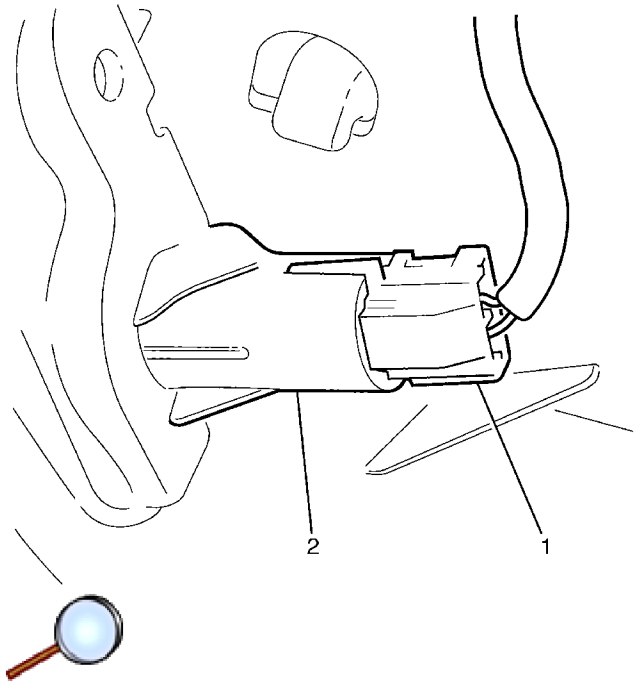

2. Disconnect the rear compartment lid wiring connector (1) to rear compartment lid release switch.
3. Remove the rear compartment lid release switch (2) from the instrument panel compartment.

Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

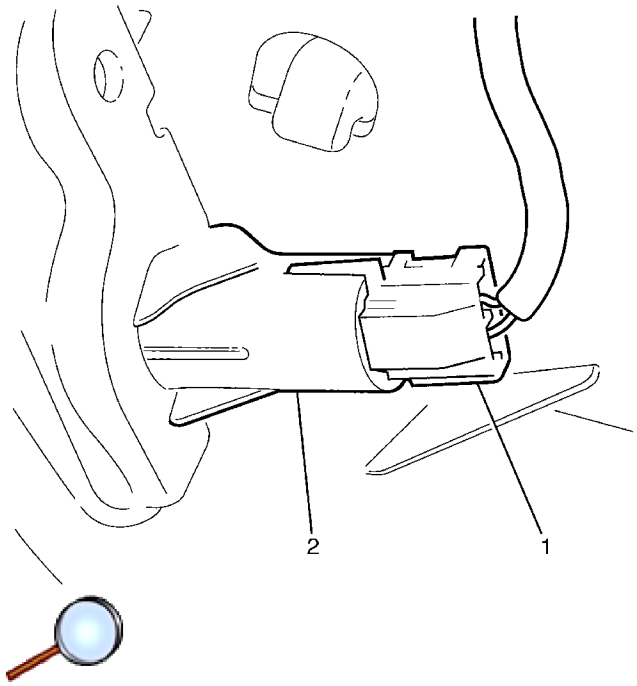

1. Install the rear compartment lid release switch (2) to the instrument panel compartment.
2. Connect the rear compartment lid wiring connector (1) to rear compartment lid release switch (2).
3. Install the instrument panel compartment. Refer to Instrument Panel Compartment Replacement.
4. If re-programming is required. Refer to Control Module References.